


## REAR CLIMATE CONTROL



E177170

1. Temperature adjustment: Select the red arrow to increase and the blue arrow to decrease the temperature. The temperature setting is displayed between the arrows.
2. Air distribution to the feet: Touch to switch on/off.
3. Air distribution to the face: Touch to switch on/off.
4. Touch to switch the rear booster blower on/off.
5. **Auto**: Touch to switch automatic operation on/off.
6. **Lock Rear Panel**: Select to disable the Rear climate control switches, in order to prevent the rear passengers from adjusting the Rear climate settings. Select again to re-enable the controls.

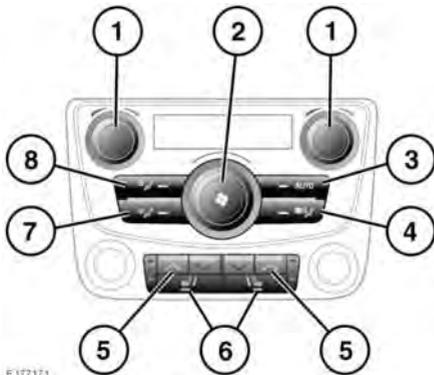

E177171

# Heating and ventilation

The Rear climate can be set with the controls located in the rear centre console.

1. Temperature control: Rotate to adjust the temperature. The temperature is displayed on the front Touch screen in the **REAR CLIMATE** screen.
2. Blower speed: Rotate to the adjust blower speed
3. **AUTO**: Press to switch automatic operation on/off.
4. Touch to switch the rear booster blower on/off.
5. Seat temperature control: Press the red arrow to increase and the blue arrow to decrease the temperature.
6. Climate seat zone control: Press to select full seat, cushion only or back only ventilation.
7. Air distribution to the feet: Press to switch on/off.
8. Air distribution to the face: Press to switch on/off.

**Note:** Some of the buttons will have an LED indicator lamp that will illuminate to confirm selection.

**Note:** In addition to the selectable controls, the **REAR CLIMATE** screen displays symbols that indicate the status of heating and ventilation functions.

**Note:** If the Climate control system is switched off, pressing the rear **AUTO** button will switch the Climate control system on.

**Note:** If the system is in Defrost mode, all rear controls are disabled and no airflow is available to the rear occupants.