

Check and top up the reservoir level at least every week. Always top up with screen washer fluid to prevent freezing.

Operate the washer switches periodically to check that the nozzles are clear and properly directed.

TOPPING UP THE WASHER FLUID

Top up the washer fluid as follows:

1. Clean the washer fluid reservoir filler cap before removing, to prevent dirt from entering the reservoir.
2. Remove the filler cap.
3. Top up the reservoir until the fluid is visible in the filler neck.
4. Replace the filler cap.