

2. Memory presets.

After adjustment of the driver's seat, steering column and the exterior mirrors, the vehicle can memorise these settings using the driver's door memory buttons. See **28, ADJUSTING THE STEERING WHEEL** and **65, EXTERIOR MIRRORS**.

1. Press the memory set button (**M**) to activate the memory function. The LED indicator lamp will illuminate to confirm.
2. Press one of the preset buttons within 5 seconds to memorise the current settings. **MEMORY 1 (2 or 3) SETTINGS SAVED** will be displayed in the Message centre, accompanied by an audible chime to confirm the settings have been memorised.

A seat position can only be memorised during the 5 second period.

Any existing settings, for a previous memory preset, will be over-written when programming a new memory position.

RECALLING A MEMORISED POSITION



Before activating the seat memory, make sure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.

Press the appropriate memory preset button. **MEMORY 1 (2 or 3) SETTINGS RECALLED** will be displayed in the Message centre.