

Mirrors

Note: Depending on the type of lens used, distances may be difficult to judge accurately when only using the mirrors.



The mirrors can be configured to automatically fold when the vehicle is locked and unfold when unlocked. This feature can be enabled/disabled by a Retailer/Authorised Repairer.

If the mirrors are accidentally knocked out of position (e.g., so only one is folded), press both buttons simultaneously to re-synchronise.

Note: If the mirrors were folded using the switches, they will not unfold when the vehicle is unlocked.

Note: Up to 3 different exterior mirror positions can be stored and recalled using the Driving position memory feature. See **22, DRIVING POSITION MEMORY**.

MIRROR DIP WHEN REVERSING

The mirrors can be configured so that when Reverse (**R**) gear is selected, the passenger's door mirror is automatically adjusted to provide an improved viewing angle for reversing.

The exact dipped position can be adjusted using the joystick control, when the mirror is dipped. The next time **R** is selected, the newly adjusted position will be selected.

When the gear selector is moved out of **R**, or if the vehicle's speed exceeds 12 km/h (7.5 mph) while reversing, the mirror will return to its previous position.

Reverse-dip Mirror can be enabled/disabled via the **Vehicle Settings** menu. See **47, INSTRUMENT PANEL MENU**.