

-  Park assist must not be used if any of the following conditions exist:
- A temporary spare wheel is in use.
 - A sensor is damaged, or the bumper is damaged sufficiently enough to affect a sensor mounting point.
 - A sensor is obstructed by items attached to the vehicle, for example, bumper covers, a bicycle rack, a trailer, or stickers.
 - The vehicle is being used to transport a load that extends beyond the vehicle's perimeter.

Note: All of the doors and the tailgate must be securely closed when using Park assist.

Note: During any Park assist manoeuvre, the Parking aid system will remain active, and will sound when objects are detected close to the vehicle.

SELECTING PARK ASSIST



The Park assist button is located alongside the Touch screen. A short press of the button switches the system on and the button LED illuminates.

Use the Park assist button to scroll through the three Park assist features:

- A first press switches the system on and selects **Parallel parking**.
- A second press selects **Perpendicular parking**.
- A third press selects **Parking exit**.
- A fourth press switches the system off and extinguishes the LED.

The selected feature's name is displayed in the Message centre. Follow the instructions and alerts shown in the Message centre to complete the required manoeuvre.

USING PARK ASSIST

For assistance when parking, select **Parallel** or **Perpendicular park**.

As the vehicle is driven forwards, the size of a potential parking space is assessed.

Note: For Park assist to search effectively, maintain a distance of 0.5 m to 1.5 m between the vehicle and the row of parked vehicles/obstacles between which you wish to park.

Note: When first activated, Park assist searches for a space on the passenger side of the vehicle. To search for a space on the driver's side, signal a turn in that direction (using the direction indicator).

Note: The Park assist auto searching feature becomes active when the vehicle's speed is less than 30 km/h (18 mph). When Park assist is activated, a previous space may already have been located. To obtain a previous space on the other side, signal a turn in that direction.

When a suitable space is found, a short confirmation tone is given and a message is displayed in the Message centre.

Note: If Park assist senses that other vehicles are too close, on either side, to perform a parking manoeuvre, a space will be rejected, even if it is large enough for the vehicle. The driver retains the option to switch Park assist off and attempt the manoeuvre manually.

For assistance in exiting a parking space, select **Parking exit**.

For Parking exit to operate correctly, your vehicle must be parked in a space where other vehicles or objects are either:

- Parked in front of your vehicle.
- Parked in front and behind your vehicle.

Note: The Parking exit feature will operate only when your vehicle has been parallel parked. Parking exit will not manoeuvre your vehicle from a perpendicular parking space.