

Warning lamps

PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated.

Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

The shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

Note: *This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.*

AUTO HIGH BEAM (GREEN)



Illuminates when the Auto high beam feature has switched on the high beam headlamps.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

Note: *Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.*

LANE DEPARTURE WARNING (GREEN)



Recognised lane markings will illuminate green, otherwise they will illuminate grey. The lamp illuminates grey to confirm the Lane Departure Warning (LDW) system is enabled.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.