


## AUTOMATIC TRANSMISSION

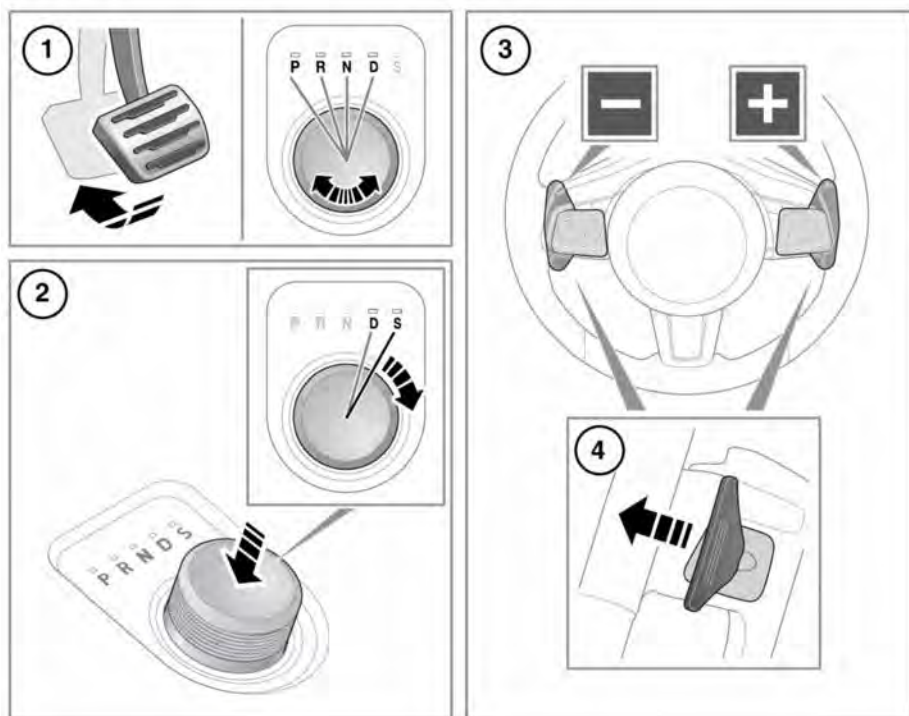

E186313

The gear selection status of the rotary gear selector and the steering wheel's gear selector paddles (Sequential shift), will be displayed in the Message centre.

When the engine starts, the rotary gear selector elevates from its lowered, stowed position and the gearbox engages in Park (**P**).

1. To select Drive (**D**), Neutral (**N**), Reverse (**R**) or **P**, press the brake pedal and then rotate the rotary gear selector to the required position. The relevant LED indicator lamp, by the gear selector, will illuminate to confirm selection.

When in **D**, gear changing is fully automatic. The gear change shift points are determined by the accelerator pedal position and the vehicle's current speed.

To achieve rapid acceleration (kick-down) while in **D**, quickly press the accelerator pedal to its full travel. When the accelerator pedal is relaxed, normal automatic gear changing resumes.

**Note:** If pressure is applied to the gear selector before the brake pedal is pressed, the selected gear may not be available. In this situation, remove pressure from the gear selector, make sure that the brake pedal is pressed and then select the required gear again.

2. To select Sport (**S**) mode from **D**, press the gear selector down and rotate to **S**. The relevant LED indicator lamp, by the gear selector, will illuminate to confirm selection.

**Note:** Before selecting **D**, **R**, **N** or **P**, make sure that the vehicle is stationary and the brakes are applied.

The transmission will stay in the lower gears for longer, improving mid-range performance.

To deselect **S** mode, rotate the gear selector back to **D**.

3. Sequential shift gear selector paddles: Allow manual gear selection, while the selector is in either the **D** or **S** positions. Lightly pull the left paddle for downshifts or lightly pull the right paddle for upshifts.

Sequential shift can be effective when rapid acceleration and engine braking are required.

A gear shift indicator warning lamp will illuminate briefly at the recommended (upshift) gear change point. See **54, GEAR SHIFT (GREEN)**.

**Note:** If continued use of the Sequential shift gear selector paddles is required, select **S**.

**Note:** The gear shift paddles can be configured to be active in both **D** and **S**, or active in **S** only, via the vehicle settings/set-up. See **47, INSTRUMENT PANEL MENU**.

4. To manually change gear, briefly pull the relevant steering wheel gear shift paddle.

To exit manual gear selection mode, either pull and hold the upshift paddle for approximately one second (to return directly to automatic operation in **D** or **S**) or, if in **S**, rotate the rotary gear selector to the **D** position.



**To avoid injury, before exiting the vehicle, always make sure that the rotary gear selector is in the P position, the engine is switched off, the Electric Parking Brake (EPB) is applied, and the Smart key is removed from the vehicle.**



Never select **P** while the vehicle is in motion. Doing so can result in serious transmission damage.



Never select **R** while the vehicle is in forward motion. Doing so can result in serious transmission damage.



Never select a forward gear while the vehicle is moving backwards. Doing so can result in serious transmission damage.



Do not rev the engine or allow it to run above normal idle speed, while selecting **D** or **R** or while the vehicle is stationary, with any gear selected. Doing so can result in serious transmission damage.



Do not allow the vehicle to remain stationary with a drive gear selected and the engine running. Always select **N** and apply the Electric Parking Brake (EPB) if the engine is to idle for a prolonged period. The vehicle may move unexpectedly with any other gear position selected.



Do not use **N** for vehicle recovery. See **256, RECOVERY METHOD**.