

## DAYTIME RUNNING LAMPS

With the lighting control in the **OFF** position or in the **AUTO** position, while the lighting conditions do not require the headlamps to be on, then the Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is out of Park (**P**) (automatic transmission).
- The Electric Parking Brake (EPB) is not applied - market dependent.



Unless required or prohibited by law, the Daytime running lamps feature can be disabled or enabled by a Retailer/Authorised Repairer.

## HEADLAMP COURTESY DELAY

This feature operates whenever the lighting control is in the **AUTO (5)** position and the ignition is switched off. The headlamps will remain illuminated for up to 240 seconds.

**Note:** *The time delay may be changed via the Vehicle Settings menu. See 47, INSTRUMENT PANEL MENU.*

Courtesy lamps can be switched off at any time by pressing the headlamp button on the Smart key.

## AUTO HIGH BEAM

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

For Auto high beam to become operational, the lighting control must be in the **AUTO (5)** position, with dipped beam headlamps selected.

The Instrument panel warning lamp illuminates when Auto high beam is selected. See 54, **AUTO HIGH BEAM (GREEN)**.

Auto high beam will only activate when the vehicle's speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle's speed drops below 24 km/h (15 mph).

To manually select high beam, move the lighting control to the high beam position as normal. To return to Auto high beam, move the lighting control back to the central position.

To manually override to dipped beam from high beam, pull the lighting control to the flash position (**2**) and Auto high beam will be cancelled. To return to Auto high beam, push the lighting control to the high beam position (**1**) and then return it to the central position.

To switch Auto high beam off, turn the lighting control from **AUTO** to headlamps.

This feature can be disabled/enabled via the **Vehicle Settings** and **Auto High Beam** Instrument panel menus. See 47, **INSTRUMENT PANEL MENU**.

The following may affect the operation of Auto high beam:

- Highly reflective road signs.
- Dimly lit road users, for example, cyclists or pedestrians.
- Adverse weather conditions, for example, rain or fog.
- Dirty or obscured sensor.
- Dirty, damaged or misted windscreen.
- Oncoming vehicles partially obscured by a central motorway barrier.
- An icy or frosted windscreen.

**Note:** *Make sure to defrost the windscreen during winter conditions.*