


- Press and hold the retaining lug at the base of the electrical connector and then pull to release it from the rear lamp.
- Completely remove the rear lamp from the vehicle.

! Make sure that the rear lamp is placed on a soft surface that will not damage or scratch the rear lamp lens.

Reverse the removal procedure to refit.

REAR LAMP BULB REPLACEMENT



! See 200, CHANGING A BULB.

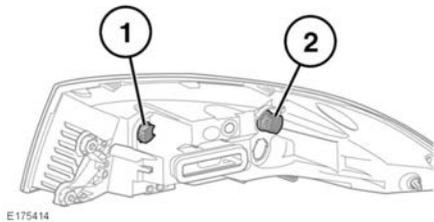

Remove the relevant rear lamp. See 207, **REAR LAMP REMOVAL**.

The bulb locations are as follows:

- Reverse lamp.
- Direction indicator lamp.

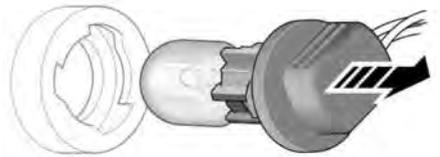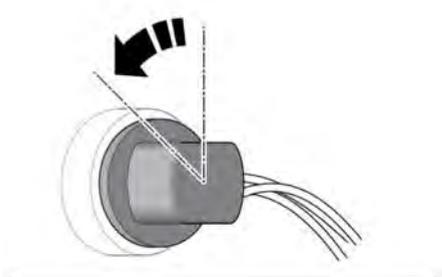

E164624

Identify the location/s of the bulb/s to be changed and then follow the procedure below:

- Rotate the bulb holder, approximately 45 degrees counter-clockwise, then pull to remove it from the rear lamp.

Note: Note the orientation of the bulb holder to aid refitting.

- Pull the bulb to remove it from the bulb holder.

Note: Note the orientation of the bulb to aid refitting.

Reverse the whole removal process to install a new bulb.

WIPERS SERVICE POSITION

! To avoid damage to the bonnet, do not lift the wiper blades when they are in the normal parked position.

Note: The Smart key must remain in the vehicle while the wiper blades are replaced.

Before changing a wiper blade, the wiper arms must be set in the 'service' position as follows: