

# Heating and ventilation

- **Auto Sensitivity:** The air quality sensor, for Automatic recirculation, can be set to **Low**, **Medium** or **High**. Select **Off** to disable Automatic recirculation.
- **Auto Power:** The blower speed for automatic operation can be set to **Low**, **Medium** or **High**.
- **Auto heated screens:** The automatic operation of the front and/or the rear heated screens can be enabled/disabled.

**Note:** Selection of the **ECO** driving mode may automatically alter some status and settings for these menus (dependent on previous selections). See **144, ECO**.

## AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the Climate control system will monitor exterior air pollution and select recirculation if it reaches a predetermined level. This feature only operates when selected from the **CLIMATE SETTINGS** menu. Recirculation sensitivity can also be changed in the **CLIMATE SETTINGS** menu. See **80, AIR QUALITY SENSOR**.

Pressing the recirculation button will not deactivate automatic recirculation.

## AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the Touch screen:

1. Select **GENERAL SETTINGS** from the **FRONT CLIMATE** menu, followed by **Climate**, to view the **CLIMATE SETTINGS** screen.
2. Touch the buttons on the screen to increase/decrease sensitivity.  
To switch off air quality sensing, touch **Off**.

## HEATED SEATS

**Note:** Seat heaters consume a large amount of battery power. They will only operate when the engine is running.

**Note:** If fitted, the rear Heated seats (non-climate) can only be operated by pressing the buttons located at the rear of the centre console.

Press the relevant rear Heated seat button, to switch the required seat heater on at the maximum setting. The 3 LED indicators on the button will illuminate.

Press a second time to set the Heated seat at the medium setting; 2 LED indicators will illuminate.

Press a third time to set the Heated seat at the lowest setting; 1 LED indicator will illuminate.

Press a fourth time to switch off.

## CLIMATE SEATS

**Note:** The Heated/Climate seats will only operate when the engine is running.

Touch the **Front seats** soft key from the **FRONT CLIMATE** menu, or press the Heated/Climate seat button.

**Note:** The **Front seats** menu will be displayed.

**Note:** A seat icon, at the top of the Touch screen, will change colour to indicate the status of the Climate seats; red for heated operation and blue for cooled operation.

### Heated ventilation

- Touch the up arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow a third time to switch off heated seat ventilation.