

## BRAKE (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

## ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission.

The vehicle can be driven, but may enter Limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## FOLLOW MODE (AMBER)



Illuminates when the Adaptive Cruise Control (ACC) system is in Follow mode.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

## INTELLIGENT SPEED LIMITER (ISL) (AMBER)



Illuminates when the Intelligent Speed Limiter (ISL) is active.

## LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler flap.