


Parking aids

USING THE PARKING AID

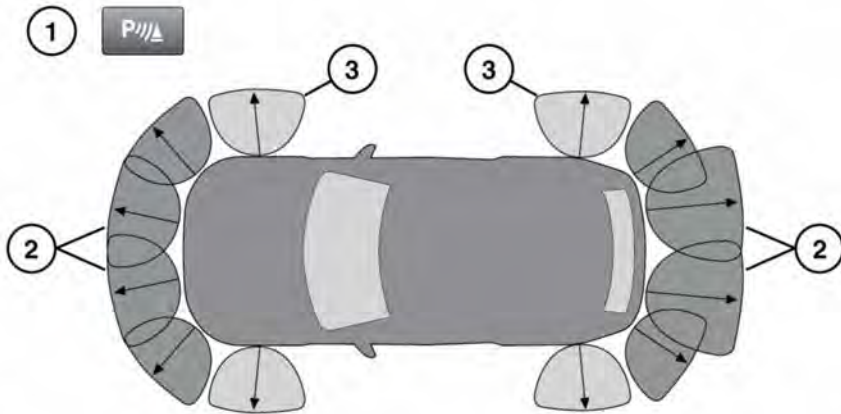

E174961

1. Parking aid switch. Located next to the Touch screen.
2. Parking aid sensor detection zones.
3. 360° Park Distance Control sensor detection zones.

⚠ **Parking aid and 360° Park Distance Control sensors will not detect moving objects, such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**

- ⓘ** The Parking aid and 360° Park Distance Control sensors may not detect some obstructions, for example, narrow posts or small objects close to the ground.
- ⓘ** If accessories, for example, a tow bar, are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

Note: *If a trailer is connected to a Jaguar Land Rover approved trailer socket, the rear sensors will be disabled.*

The Parking aid and 360° Park Distance Control systems assist the driver while manoeuvring the vehicle in confined spaces. When active, object tracking along the front, side, and rear of the vehicle are displayed on the Touch screen. The four corner sensors provide the 360° Park Distance Control monitoring along the vehicle sides. While the vehicle is passing an object that is within sensor range, the vehicle's integrated systems calculate its trajectory within the 360° Park Distance Control monitored area.

While the vehicle is stationary, the sensors will not detect an object/person approaching from the side. Also, at vehicle start-up, the vehicle has no sensor information about side objects/persons. In both of these situations, an X displays on the Touch screen in the vehicle's blind spots.