

Heating and ventilation

TIMED CLIMATE TOUCH SCREEN CONTROLS

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the Climate control **AUTO** or **A/C** button will flash. **AUTO** indicates the engine or cabin are being heated. **A/C** indicates the cabin is being ventilated. The choice of operation is automatically determined by the system, depending on the external temperature.

Note: The system will cease operation if the engine is started.



To set a Timed climate program:

- Select **Timed Climate** from the **FRONT CLIMATE** screen or from the **EXTRA FEATURES** page.
- Select either **7 Day Timer** (1) or **Single Event** (2). When selected, touch **SET** (3).

7 Day timer: Select the day, then select the start times (hours and minutes) for each of the 2 settings, using the arrows. These times can also be set for **All week**.

Single Event: Set the start time and touch **SET**.

Note: The time format, 12/24 hour clock, is determined by the time settings currently selected in the **SYSTEM SETTINGS** menu. See **76, SYSTEM SETTINGS**.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant soft key (1 or 2) on the timer setup menu.