


WIPER OPERATION

- ❗ Do not operate the wipers on a dry screen.
- ❗ Remove any snow, ice, or frost from the windscreen, around the wiper arms and blades, and the windscreen scuttle, before operating the wipers.
- ❗ To avoid damage to the bonnet, do not lift the wipers when they are in the normal parked position. See **209**, **WIPERS SERVICE POSITION**.

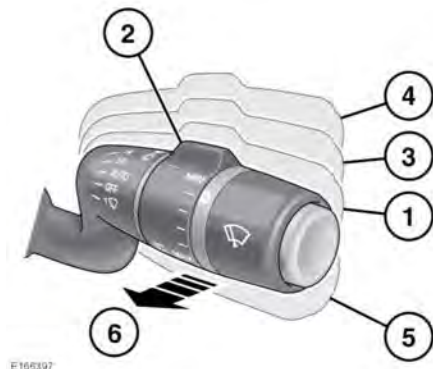

Vehicles with a rain sensor:

1. Automatic Rain sensing mode: The front wipers will respond and adapt automatically to the ambient rain conditions, selecting the appropriate wiper frequency for the prevailing conditions. The sensitivity of the system can be adjusted by rotating the collar (2).
- ❗ Make sure the wipers are switched off before entering a car wash. If the automatic Rain sensing system operates during the car washing process, damage may occur to the wiper mechanism.
2. Rotate the collar to adjust the sensitivity of the automatic Rain sensing mode when position (1) is selected. The higher the sensitivity position, the more responsive the system will become. When automatic Rain sensing mode is selected, or when sensitivity is increased, the system will perform a single wipe.
 3. Low speed continuous wipe.
 4. High speed continuous wipe.
 5. Single wipe of the windscreen, or hold down for further continuous wipes.
 6. Windscreen wash/wipe: Pull and release to operate the front washers and wipers. The wipers will operate for 2 further wipes after the wiper/washer control is released. After a few seconds, a drip wipe will clear any residual washer fluid from the windscreen. If more washer fluid is required, pull and hold the wiper/washer control position.

Note: A very short pull and release will operate the front washers only.

Note: The front wipers will not operate while the bonnet is open.

Vehicles without a rain sensor:

1. Intermittent wipe: The time delay between wipes can be adjusted by rotating the collar (2).
- ❗ Make sure the wipers are switched off before entering a car wash. If the wipers operate during the car washing process, damage may occur to the wiper mechanism.
2. Rotate the collar to adjust the time delay between wipes when position (1) is selected. The higher the setting, the more frequently wipes will occur.
- Note:** Wipe frequency will increase with vehicle speed.
3. Low speed continuous wipe.