


## CLIMATE CONTROL

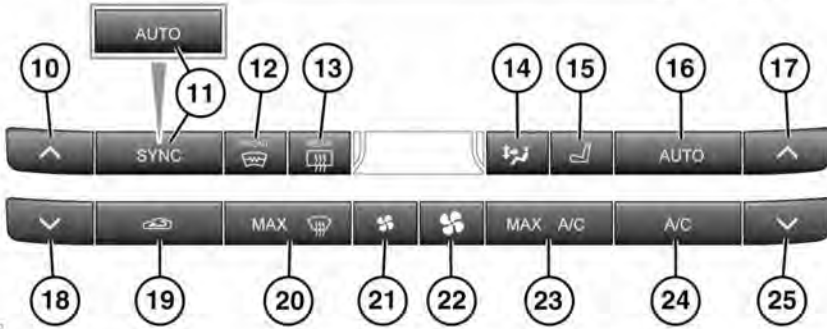

E177162

- 1. Climate:** To access the **FRONT CLIMATE** screen, touch **Climate** on the **HOME** menu screen. See **75, TOUCH SCREEN CONTROLS**.
- 2. Seats:** Touch to select the **SEATS** settings screen.
- 3. Rear Climate:** Touch to select the **REAR CLIMATE** settings screen.
- 4. Timed Climate:** Touch to select the **TIMED CLIMATE** settings menu. See **81, TIMED CLIMATE**.
- 5.** Touch to switch the Climate control system off.
- 6. Windscreen air distribution:** Touch to switch on/off.
- 7. Air distribution:** Touch the upper (face distribution) or lower (body/feet distribution) area to select.
- 8. Sync Temp.:** Select to change all the front and rear passenger climate settings to match that of the driver.
- 9.** Touch to select the **GENERAL SETTINGS** menu, followed by **Climate**, to view the **CLIMATE SETTINGS** screen.
- 10.** Press repeatedly to increase the temperature for the front left side of the vehicle.
- 11.** Press to synchronise the driver and front passenger climate zone settings. On vehicles with Rear climate control, press to select **AUTO** mode (see **16**) for the left side.