

For more stubborn stains, a commercially available carpet cleaner should be used.

## CLEANING SCREENS AND DISPLAYS



Do not use upholstery cleaner on electrical equipment such as fascia switches.



When cleaning around electrical equipment, such as switches, make sure fluids do not leak into any gaps around the components or between panels or trim.

- Clean with a soft, dry cloth.
- Do not use chemical agents or domestic cleaners.
- Do not allow sharp, hard or abrasive objects to make contact with screens.
- Avoid exposing screens to direct sunlight for long periods.
- To prevent errors occurring, make sure only one finger at a time is in contact with the Touch screen.
- Do not use excessive pressure.

## WIPER BLADES



Do not use excessive pressure.

Heavy contamination on the wiper blades should be removed using a soft, damp sponge or cloth.

## BLOCKED WASHER JETS



**Do not operate the washer jets during unblocking or adjustment. Windscreen washer fluid may cause irritation to the eyes and skin. Always read and observe the washer fluid manufacturer's instructions.**

If a washer jet becomes blocked, use a thin strand of wire to unblock it, by inserting the wire into the jet. Make sure the wire is completely removed after unblocking.

## REPAIRING MINOR PAINT DAMAGE

Regularly inspect the paintwork for damage. Any stone chips, fractures, or deep scratches, in the paint/bodywork should be repaired promptly. Bare metal will corrode quickly, and if left untreated can result in expensive repairs.