


## AM/FM RADIO CONTROLS

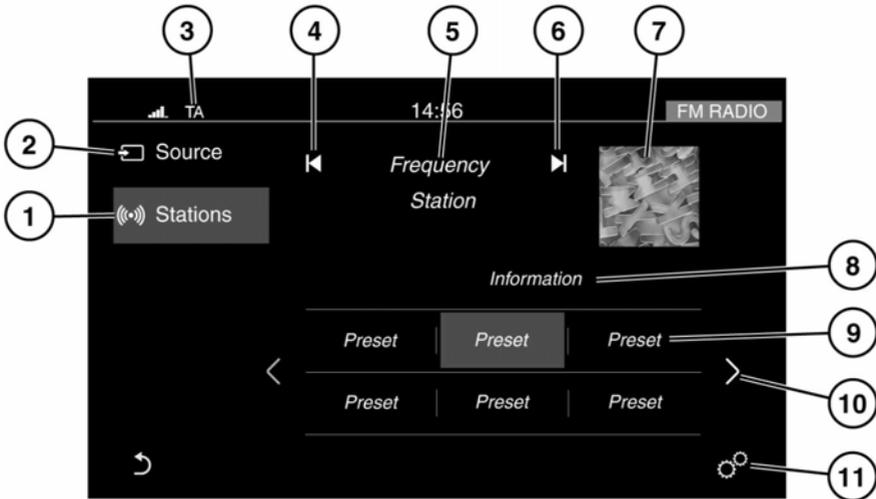

E171498

1. **Stations:** Touch to select the station list for the chosen radio source.
2. **Source:** Touch to select the media source list. See **151, MEDIA CONTROLS**.
3. **Status icons:** When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
4. **Seek down:** Touch to auto-seek down the frequency to the next radio station.  
*Note: In some markets, additional buttons are available to enable manual tuning.*
5. The selected station name and frequency.
6. **Seek up:** Touch to auto-seek up the frequency to the next radio station.  
*Note: In some markets, additional buttons are available to enable manual tuning.*
7. Waveband image (if available).
8. Information from the selected station.
9. **Station presets:**
  - Touch to tune to the station stored on that preset.
  - Touch and hold to store the current station on that preset.
  - Use the seek buttons on the steering wheel to change to the next or previous preset station.
10. Touch to scroll through the preset stations.
11. Touch to select the **SETTINGS** pop-up menu. Select **Media** and then **Radio**, where the following features can be activated/deactivated:
  - **Manual tune.**
  - **Radiotext** (FM only).
  - **Alternative Frequency (AF)** (FM only).
  - **Regionalization** (FM only).*Note: Settings options may vary, depending on the market.*