

# Warning lamps

## LANE DEPARTURE WARNING (RED)



If the Lane Departure Warning (LDW) system detects that the vehicle has crossed either of the lane markings that it is travelling within, without activation of the appropriate direction indicator, then the relevant lane will illuminate red. This will also be accompanied by a vibration felt through the steering wheel.

## LOW OIL PRESSURE (RED)



If the lamp flashes or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately.

Check and top up the oil level, if necessary. Start the engine; if the lamp remains illuminated, switch the engine off immediately and seek qualified assistance before continuing.

## PARKING BRAKE (RED)



Illuminates when the Electric Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt is buckled.

**Note:** Objects on the front passenger seat may activate the Seat belt reminder feature. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See 30, **USING THE SEAT BELTS**.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on, and extinguishes after 6 seconds.

If the lamp illuminates again, after the bulb check or when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.