

Adaptive cruise control

Note: *Dependent on the vehicle's specification, the set speed will be displayed as a marker on the speedometer or a numeric display in the Message centre. The set speed can also be displayed in the Head-up display, if enabled. See 50, HEAD UP DISPLAY.*

3. **RES:** Press to resume the ACC set speed after it has been disengaged.
4. Press to decrease the Follow mode gap. See **138, ENTERING FOLLOW MODE.**
5. Press (-) to decrease the set speed. The speed of the vehicle will gradually decrease to reach the new set speed.
6. Press to increase the Follow mode gap.
7. **CAN:** Press to cancel but retain the set speed in the memory.

ENTERING FOLLOW MODE



When in Follow mode, the vehicle may not decelerate automatically to a stop, nor will the vehicle always decelerate quickly enough to avoid a collision.

Note: *Follow mode is an integral function of Adaptive Cruise Control (ACC). You cannot disengage Follow mode and still use Cruise control to maintain your speed.*

Once a set speed has been selected, the driver can release the accelerator and the set road speed will be maintained.

If a vehicle ahead enters the same lane, or a slower vehicle is ahead in the same lane, your vehicle's speed will adjust automatically until the gap to the vehicle ahead corresponds to the gap setting. The vehicle is now in Follow mode.

The Follow mode warning lamp will illuminate to confirm Follow mode is operational (see **53, FOLLOW MODE (AMBER)**).

The Message centre will display the gap set in the form of a vehicle with a varying number of bars in front of it.

The vehicle will then maintain the constant time gap to the vehicle ahead until:

- The vehicle ahead accelerates to a speed above the set speed.
- The vehicle ahead moves out of lane or out of view.
- A new gap setting is chosen.

If necessary, the vehicle's brakes will be automatically applied, slowing the vehicle and maintaining the gap to the vehicle in front.

The maximum braking which is applied by ACC is limited and can be overridden by the driver applying the brakes, if required.

Note: *Driver braking will cancel ACC.*

If the ACC system predicts that its maximum braking level will not be sufficient, then an audible warning will sound while the ACC system continues to brake. **DRIVER INTERVENE** will be displayed in the Message centre. Take immediate action.

When in Follow mode, the vehicle will automatically return to the set speed when the road ahead is clear, for instance when:

- The vehicle ahead accelerates to a speed above the set speed, or changes lane.
- You change lane to either side or enter an exit lane.

The driver should intervene, if appropriate.

If a direction indicator is used, ACC will reduce the gap to the vehicle ahead so as to respond more quickly to the anticipated manoeuvre. If a manoeuvre is not actioned, the previous gap will be restored after a few seconds. Enhanced response may not occur if ACC detects that it is inappropriate, i.e., you are already too close to the vehicle ahead or you are already in another lane.