

UNDER BONNET COVERS - REFITTING

Open the bonnet and follow the procedure:

1. Locate the cover's rear locating lugs into the vehicle's panel.
2. Lightly press down the cover to engage the front retaining lug into the vehicle's panel.

Note: *The cover should be a flush fit and aligned to the vehicle's panel.*



Before attempting a bulb change, make sure that the ignition and the affected lamp are switched off. If the circuit remains live, a short circuit can occur, which may damage the vehicle's electrical system.

FUEL SYSTEM



Under no circumstances, should any part of the fuel system be dismantled or renewed by anyone other than a suitably qualified vehicle technician.



Make sure sparks and naked lights are kept away from the engine compartment.



Wear protective clothing, including, where practical, gloves made from an impervious material.

CHANGING A BULB



If the exterior lamps have just been switched off, give the bulbs time to cool. Handling them when hot may cause personal injury.



To avoid personal injury, due to any possible residual electrical current, make sure not to touch any electrical connectors or circuit boards while changing a bulb. If removal of the outboard rear lamp is required, always wear appropriate gloves when disconnecting the wiring loom from the rear lamp.



Always replace bulbs with the correct type and specification. If you are in any doubt, contact a Retailer/Authorised Repairer for advice.