


**Note:** The Media system will operate with the ignition on or off, but will switch off when the ignition is switched off. Switch the Media system on again, if required.

## AUDIO STEERING WHEEL CONTROLS

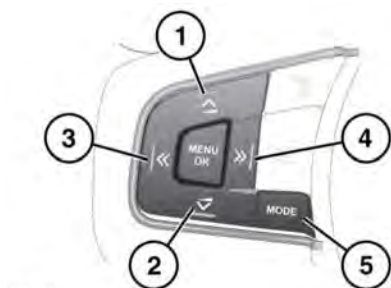

E 165 147

1. Press to increase the volume for any source.
2. Press to decrease the volume for any source.
3. Skip/scan backwards: Press to skip back to the beginning of the current track being played, or long-press to scan backwards through the current track being played. Playback resumes when released.
4. Skip/scan forwards: Press to skip forwards to the start of the next track, or long-press to scan forwards through the current track being played. Playback resumes when released.
5. **MODE:** Press repeatedly to scroll through all of the available, or connected, media sources.

## INSTRUCTIONAL VIDEO



E177907

## MEDIA SETTINGS

To view the **MEDIA SETTINGS** menu, select **Media** from the **GENERAL SETTINGS** menu.

The **MEDIA SETTINGS** menu contains the following options:

- **Traffic Announcement.** Switch on/off.
- **Sound:** Select to view the **SOUND SETTINGS**.
- **Radio:** These setting options are dependent on the radio source selected. See **154, AM/FM RADIO CONTROLS** or **155, DAB RADIO CONTROLS**.

## SOUND SETTINGS

To adjust the **Balance/Fader** settings:



E177727

Touch the arrows to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and drag it to the required position or touch anywhere on the vehicle graphic and release. To return to the default setting, touch the sound focal point.

To adjust the **Bass/Mid/Treble** settings:

- Touch + or - to adjust the Bass, Mid or Treble levels. Alternatively, touch the slider bar and drag or touch anywhere on the bar and release.

To switch between **Balance/Fader** and **Bass/Mid/Treble** settings:



1. Touch the icon to move from the **Bass/Mid/Treble** screen to the **Balance/Fader** screen.
2. Touch the icon to move from the **Balance/Fader** screen to the **Bass/Mid/Treble** screen.

To adjust the **Speed dependent volume**, select from the following options: **Off**, **Low**, **Mid** or **High**.