

Follow mode	
entering.....	138
gap change.....	139
gap changing.....	139
off.....	55
override.....	140
resume.....	140
switching off.....	139
Forward alert.....	142
Forward alert in ACC	
object detection.....	142
Forward alert warning lamp.....	54
Front airbags.....	44
Front climate control.....	78
automatic recirculation.....	80
Front parking aids.....	118
system fault.....	119
Front towing eye.....	256
Front wipers	
winter park position.....	209
Fuel and refuelling.....	191
anti misfuel device active.....	191
consumption.....	194
diesel.....	187
diesel fuel sulphur content.....	187
ethanol.....	186
filler flap.....	191
fuel filler flap.....	190
methanol.....	187
methyl tertiary butyl ether (MTBE).....	187
misfuel device passive.....	192
octane rating.....	186
petrol.....	186
running out.....	189
safety precautions.....	186
tank capacity.....	193
water in fuel.....	190
Fuel burning heater.....	81
Fuel can.....	189
Fuel consumption.....	194
combined cycles.....	195
extra-urban cycle.....	195
urban cycle.....	194
Fuel filler flap.....	190
Fuel gauge.....	47
Fuel saving	
eco program.....	144
Fuel system.....	200
Fuel tank	
capacity.....	264
Fuses	
changing.....	230
engine compartment fuse box.....	230
locations.....	229
luggage compartment fuse box.....	233
passenger compartment fuse box.....	232
<b>G</b>	
Garage door opener.....	70
assistance.....	71
erase all programming.....	71
programming.....	70
programming a single button.....	71
Garage door transceiver.....	70
Gearbox	
automatic.....	107
gear shift warning lamp.....	54
limp home mode.....	109
manual.....	109
Glass cleaning.....	212
Global closing.....	17
Global opening.....	8
Glow plugs	
warning lamp.....	53
<b>H</b>	
Handbook symbols.....	2
Handbrake.....	116
Hands free parking.....	123
park assist limitations.....	125
park assist troubleshooting.....	125
selecting park assist.....	124
Hazard warning lamps	
emergency stop signal.....	117
Headlamps.....	56
adaptive.....	58
beam pattern.....	58