


## FUSE BOX LOCATIONS

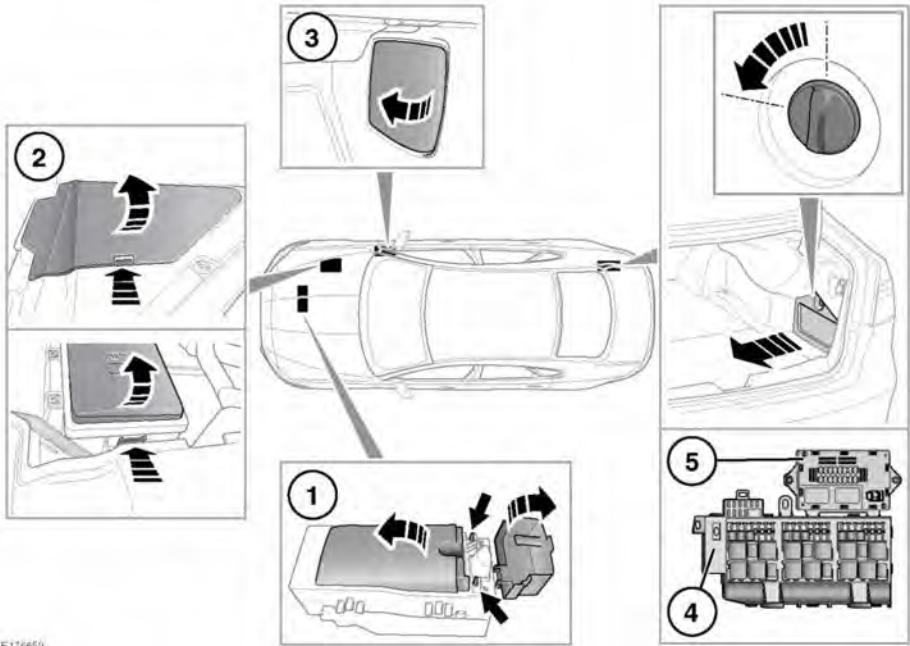

E176659

- !** When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

There are 5 separate fuse boxes fitted to the vehicle, each one containing fuses protecting a different group of circuits.

**1.** Engine compartment front fuse box.

- Lift up the positive booster terminal cover. Press and hold the fuse box cover retaining clips and then lift to open the cover.

**2.** Engine compartment rear fuse box.

- Remove the under bonnet cover by lightly pressing and holding the retaining clip, then lift to release and pull to remove. See **199, UNDER BONNET COVERS - REMOVAL**.

Press and hold the fuse box cover retaining clip to lift and pull to remove.

**3.** Passenger compartment fuse box, located on the right side 'A' post, below the fascia.

- Use a suitable tool to unclip the rearward edge of the panel to release and then pull to remove.

**Note:** Note the orientation of the panel to aid refitting.

**4.** Luggage compartment lower fuse box.