

- ❗ Do not perform a Parking exit manoeuvre until the message **Drive forward with care** is displayed in the Message centre.

For all three Park assist features, follow the instructions in the Message centre until the parking or exiting manoeuvre has been completed.

- ❗ Although the vehicle takes control during the parking or exiting manoeuvre, the driver must maintain full control of the accelerator and brake throughout.

Note: *If the vehicle's speed exceeds 5 km/h (3 mph) during the manoeuvre, Park assist will display a message until the vehicle's speed decreases to less than 5 km/h (3 mph). If the vehicle's speed exceeds 7 km/h (4 mph) Park assist will deactivate.*

If a system fault is detected, a continuous tone will sound and a message is displayed in the Message centre. Consult a Retailer/Authorised Repairer.

PARK ASSIST LIMITATIONS

- ⚠️ **Park assist is a supplement to, and not a replacement for, good observation and a safe driving style. It is the driver's responsibility, at all times, to make sure that reversing manoeuvres are carried out safely.**

Park assist may provide inaccurate results if:

- The size or shape of the parking space changes after it was measured.
- There is an irregular kerb alongside the parking space, or the kerb is covered with leaves, snow etc.
- The vehicle is being used to transport a load that extends beyond the perimeter of the vehicle.

- The vehicle had a repair or alteration that was not approved by a Retailer/Authorised Repairer.
- The vehicle has been fitted with non-approved wheels or tyres or there is significant tyre wear.
- One of the parked vehicles has an attachment at a raised height such as a flat bed truck, snow plough or cherry picker.
- The parking space is located on a corner or curve.
- The sensors are dirty or covered in mud, ice or snow.
- The weather is foggy, raining or snowing.
- The road surface is bumpy such as gravel.
- A tow bar or trailer hitch is fitted.
- A trailer is connected.

Note: *If a trailer is connected to a Jaguar Land Rover approved trailer socket, the Park assist system will be disabled.*

- It encounters an obstruction that is thin or wedge shaped.
- It encounters an obstruction that is elevated and/or protruding, such as ledges or tree branches.
- It encounters an obstruction with corners and sharp edges.

PARK ASSIST TROUBLESHOOTING

Park assist is not searching for a parking space:

- The system may not be activated.
- The vehicle may be travelling above 30 km/h (18 mph).
- The sensors may be covered or partly obscured by dirt, mud, ice, or snow.

Park assist

Park assist does not offer a certain parking space:

- The sensors may be covered or partly obscured by dirt, mud, ice, or snow.
- The space may not be large enough, or there may not be enough space on the opposite side of the vehicle, for the front to swing out during the manoeuvre.
- The vehicle may have been driven more than 1.5 m from the row of parked vehicles.
- The vehicle may have been driven within 41 cm to the row of parked vehicles.
- The vehicle may have been driven in reverse. Park assist searches for a parking space only when the vehicle is in Drive (D).
- The approach angle may not be suitable.

Park assist has not positioned the vehicle accurately within the space:

- One or more of the system limitations criteria may have been met. See **125, PARK ASSIST LIMITATIONS**.