



- Any modification involving the removal or repair of any wiring or component in the vicinity of any of the airbag system components, including the steering wheel, steering column, instrument or fascia panels.
- Any modification to the fascia panels or steering wheel.

PARTS AND ACCESSORIES

 **The fitting of non-approved parts and accessories, or the carrying out of non-approved alterations or conversions, may be dangerous and could affect the safety of the vehicle and occupants, and also invalidate the terms and conditions of the vehicle's warranty.**

 **Jaguar Land Rover Limited will not accept any liability for death, personal injury, or damage to property, which may occur as a direct result of fitment of non-approved accessories or the carrying out of non-approved conversions to your vehicle.**

 **All replacement parts for the Air Conditioning (A/C) system should be new and equivalent to the manufacturer's original equipment, while complying with the SAE Standards. Contact a Retailer/ Authorised Repairer for advice.**





This symbol may be used on an under bonnet label and is relevant to the air conditioning refrigerant fluid. The symbol identifies extremely flammable chemicals that have an extremely low flash point and boiling point, and gases that catch fire when in contact with air.

ROAD TESTING DYNAMOMETERS (ROLLING ROADS)


It is essential that any dynamometer testing is carried out only by a qualified person, familiar with the dynamometer testing and safety procedures practised by Retailers/Authorised Repairers.


SAFETY IN THE GARAGE

 **If the vehicle has been driven recently, do not touch the engine, exhaust, and cooling system components until the engine has cooled.**


 **Never leave the engine running in an unventilated area - exhaust gases are poisonous and extremely dangerous.**

 **Do not work beneath the vehicle with the wheel changing jack as the only means of support.**

 **The jack is designed for wheel changing only. Never work beneath the vehicle with the jack as the only means of support. Always use correctly rated vehicle support stands, before putting any part of your body beneath the vehicle.**

 **Keep your hands and clothing away from drive belts, pulleys, and fans. Some fans may continue to operate or start operating after the engine has stopped.**

 **Remove metal wristbands and jewellery, before working in the engine compartment.**

 **Do not touch electrical leads or components while the engine is running, or the vehicle's ignition is switched on.**