

Stability control

The Message centre will display **DSC OFF** and a short warning chime will sound. The DSC Off warning lamp will also illuminate to confirm that DSC is disabled. See **53, DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)**.

SWITCHING DSC ON

To switch DSC on, press and release the DSC **OFF** button.

The DSC system will switch on and the Message centre will temporarily display **DSC ON**.

The DSC Off warning lamp will extinguish to confirm that DSC is enabled. See **53, DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)**.

***Note:** Switching the engine off and then on again, will always revert the DSC status to **DSC ON**, regardless of which mode is selected.*

The DSC warning lamp will flash when DSC is active (Cruise control will automatically disengage if this occurs). See **53, DYNAMIC STABILITY CONTROL (DSC) (AMBER)**.