

M

Maintenance

arduous driving conditions.....	196
brake fluid level.....	221
bulb changing.....	200
rear lamp removal.....	207
capacities.....	264
changing a fuse.....	230
checking tyre pressure after a repair.....	248
cleaning	
alloy wheels.....	212
exterior.....	212
glass.....	212
interior.....	213
leather.....	213
rear screen.....	213
sensors and cameras.....	212
the engine compartment.....	212
closing the bonnet.....	199
clutch fluid level.....	221
daily checks.....	196
engine compartment fuse box.....	230
engine coolant level.....	219
engine oil level.....	217
fuel system.....	200
fuse box (passenger compartment).....	232
halogen bulb changing	
daytime running lamps.....	202
jump starting.....	227
label locations.....	260
lubricants and fluid specifications.....	263
luggage compartment fuse box.....	233
oil top up.....	219
paintwork repair.....	215
polishing.....	213
removing grease and tar.....	213
removing stains.....	214
running-in.....	196
smart key battery.....	12
sunroof wind deflector.....	213
tyre repair kit.....	246
tyre repair procedure.....	247
using a starting aid.....	227

washer fluid level.....	222
weekly checks.....	196
Manual seats.....	20
Map screen	
navigation system.....	179
Media controls.....	151
Message centre display units.....	49
Methanol.....	187
Minor paintwork repairs.....	215
Mirrors	
blind spot monitor.....	67
closing vehicle sensing.....	68
sensors.....	69
dip when reversing.....	66
exterior mirrors.....	65
Misfuel device active.....	191
Misfuel device passive.....	192
Modes	
driving.....	144
standard.....	144
winter.....	145
Mpg.....	194

N

Navigation

emergency contacts.....	181
license.....	182
map screen.....	179
menu.....	178
operating.....	176
overview.....	176
points of interest (POI).....	181
SD card.....	176
set a selected destination.....	182
settings.....	179
guidance.....	180
soft key icons.....	182
terms and conditions.....	182
voice commands.....	161
where to?.....	180

O

Obstructing the airbag.....	42
-----------------------------	----