


# Exiting the vehicle

**Note:** The Intrusion sensor is an alarm sensor. The **Alarm Sensors** can be enabled/disabled (for one alarm cycle only) via the **Vehicle Settings** menu. See **47, INSTRUMENT PANEL MENU**.

## DOOR LOCKS AND RELEASE LEVERS

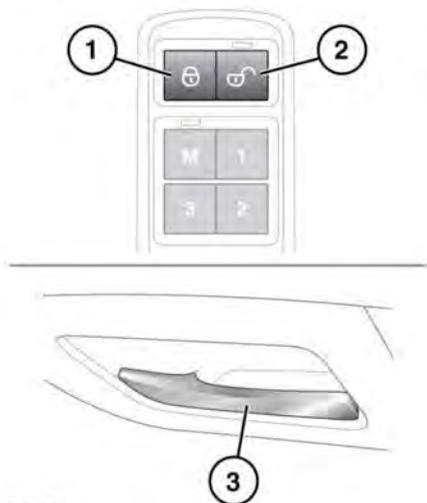

1. With all of the doors closed, press the master lock switch to lock all of the doors and the luggage area.
2. Press the master unlock switch to unlock all of the doors and the luggage area.
3. Pull the door lever to unlock/release the door. Operating the door lever on either front door unlocks all of the doors.

**Note:** If the vehicle is locked with the Smart key, operating an interior door release lever unlocks only that door. If the door is opened, the alarm sounds.

**Note:** The rear door Child safety locks inhibit the rear door lock and unlock switches, and the door release handles. See **34, CHILD SAFETY LOCKS**.

## MISLOCK

When locking the vehicle with the Smart key, a mislock can occur if:

- One or more of the doors, the bonnet or the luggage area is not fully closed.
- The ignition is ON.
- A Smart key is left inside the vehicle.

If any of the above are present, the vehicle will NOT lock and there will be an audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all of the doors, the bonnet and the luggage area are closed properly. Make sure the ignition is switched OFF and lock the vehicle again. If the mislock persists, consult your Retailer/Authorised Repairer.

## DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered, it can be deactivated by any one of the following methods:

1. Pressing the unlock button on the Smart key.
2. Opening a door using Keyless entry.
3. Pressing the **START/STOP** button with a valid Smart key positioned correctly. See **103, KEYLESS START BACKUP**.

The cause of the last alarm activation can be displayed in the Message centre. See **47, INSTRUMENT PANEL MENU**.