







# Seat belts

All the seat belts (except for the rear centre seat belt) are equipped with a load limiter. This will help to regulate the over-tension of a seat belt in a severe impact, to help reduce the possibility of injury to the occupant.

-  **A seat belt should be replaced if the webbing becomes frayed, contaminated or damaged.**
-  **It is essential to replace the entire assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.**
-  **If any damage, wear, cuts, defects, or impaired operation are noted with the seat belts, the vehicle should be taken to a Retailer/Authorised Repairer for immediate attention. Do not use the vehicle if the seat belts cannot be operated correctly.**
-  **Seat belts should be inspected or replaced by qualified personnel only. All replacement parts should be, at least, the same specification as the vehicle's original equipment. If in doubt, consult a Retailer/Authorised Repairer.**
-  **Do not attempt to service, repair, replace, modify, or tamper with, any part of the vehicle's seat belts; doing so may render the seat belts as ineffective.**
-  **Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. Contaminated seat belts may not operate correctly in an impact and cannot be relied upon.**



**When using seat belts to restrain items other than occupants, take care to make sure that the belts are not damaged, or exposed to sharp edges.**



**Do not carry hard, fragile, or sharp items between your person and the seat belt. In an impact, the pressure on such items can cause them to break, which in turn may cause death or serious injury.**

## SEAT BELT CHECKS

*Note: If the vehicle is parked on an incline, the seat belt mechanism may lock. This is a safety feature and the belt should be gently eased out from the upper anchorage.*

The seat belts should be inspected regularly to check for fraying, cuts or wear to the webbing, and the condition and security of the mechanism, buckles, adjusters, and mounting points.

- With the seat belt fastened, give the webbing near the buckle a quick upward pull. The buckle must remain securely locked.
- With the seat belt unfastened, unreel the seat belt to the limit of its travel. Check that it unreels smoothly with no snatches or snags. Allow the belt to fully retract, again checking for smooth operation.
- Partially unreel the seat belt, then hold the tongue plate and give a quick forward pull. The mechanism must lock and prevent any further unreeling.

If any of the seat belts fail to meet those criteria, immediately contact a Retailer/Authorised Repairer.