

- ❗ If the clutch pedal is pressed when the engine **START/STOP** button is pressed, the engine will start.
2. Press and hold the engine **START/STOP** button until the Instrument panel warning lamps illuminate.
3. Release the engine **START/STOP** button.

ROLLING RE-START

If the engine is switched off while the vehicle is moving, a rolling restart can be initiated by:


- Automatic transmission: Selecting Neutral (**N**) and pressing the engine **START/STOP** button.
- Manual transmission: Firmly pressing the clutch pedal, and simultaneously pressing the engine **START/STOP** button.

Note: The engine **START/STOP** button is inhibited for 2 seconds after the engine has been switched off.

KEYLESS START BACKUP

If the vehicle is unlocked using the emergency key blade, or the Smart key is not detected by the vehicle, it will be necessary to use the Keyless start backup feature to disarm the alarm and start the engine.

The Keyless start backup feature can only be used when the message **Smart Key Not Recognised - Reposition or Place As Shown and Press Start Button** is displayed in the Message centre.

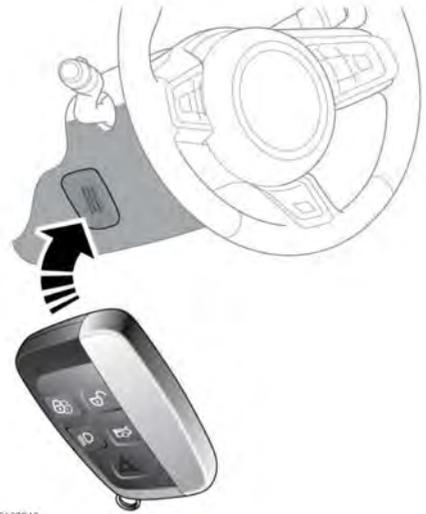

1. Position the Smart key flat against the side of the steering column, with the buttons facing outwards.

Note: There are markings on the steering column to help locate the correct position.

2. While holding the Smart key in position:
Automatic transmission: Firmly press the brake pedal.
Manual transmission: Firmly press the clutch pedal.
3. Press and release the engine **START/STOP** button.

Once the engine starts, release the brake pedal (automatic transmission) or clutch pedal (manual transmission), if it is safe to do so.

If the Smart key is not recognised, or the engine fails to start, consult a Retailer/Authorised Repairer.