


## MAIN MENU

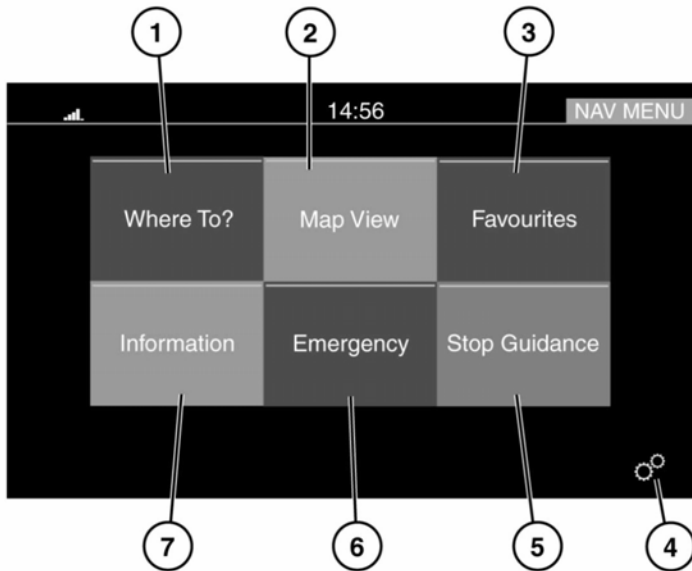

E166331

1. **Where To?:** Touch for a list of options for setting a destination. See **180, WHERE TO?**.
2. **Map View:** Touch to view the map screen.
3. **Favourites:** Touch to view the list of stored destinations.
4. **Settings:** Touch to select the **GENERAL SETTINGS** menu, followed by **Navigation**, to view the **NAVIGATION SETTINGS** screen. See **179, SETTINGS**.
5. **Stop Guidance:** Touch to cancel the current route guidance.
6. **Emergency:** Touch to see a list of emergency services. See **181, EMERGENCY**.
7. **Information:** Touch to display the following: **Traffic, Where am I, and Trip computer**.