

PERIMETER ALARM



No modifications or additions should be made to the anti-theft system. Such changes could cause the system to malfunction.

The Perimeter (exterior) alarm system is activated when the vehicle is Single locked. See **14, SINGLE LOCKING**.

Once activated, the alarm system will sound if:

- The bonnet, luggage area or a door is opened.
- The engine **START/STOP** button is pressed without a valid Smart key present.
- The vehicle's battery is disconnected.
- An attempt is made to disconnect the alarm siren.

If the vehicle is fitted with a battery back-up sounder, the sounder will sound if the battery is disconnected, or an attempt is made to disconnect the sounder.

FULL ALARM

The Full alarm system is activated when the vehicle is Double locked. See **14, DOUBLE LOCKING**. Once activated, the alarm system will sound if:

- The bonnet, luggage area or a door is opened.
- Movement is detected within the vehicle's interior, including air currents.
- The vehicle is raised or tilted.
- Any glazed area is broken.

If the vehicle is fitted with a battery back-up sounder, the alarm system will also sound if:

- The vehicle's battery is disconnected.
- An attempt is made to disconnect the alarm siren.

- An attempt is made to disconnect the battery back-up sounder.

Note: An open glass area may cause the alarm to sound, due to the movement of air currents. Make sure that they are fully closed before Double locking the vehicle.

INTERIOR PROTECTION

The Interior protection feature of the Full alarm system may be temporarily disabled via **Alarm sensors** in the **Vehicle Settings** menu. See **47, INSTRUMENT PANEL MENU**.

Note: If the Interior protection feature is temporarily disabled, it will be automatically enabled the next time the vehicle is Double locked with the Smart key.

KEYLESS LOCKING



Never double lock the vehicle with people, children or pets inside. In the event of an emergency, they would be unable to escape and the emergency services would be unable to release them quickly.



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry, Keyless locking or Keyless starting.

Note: The vehicle will not lock automatically.

Note: Loose coins, in the same pocket as the Smart key, may also affect its detection.

Note: Keyless locking activates only if the Smart key is detected outside the vehicle. If no Smart key is present, no locking will occur.