


## DEPLOYING THE REAR SEAT SCREENS

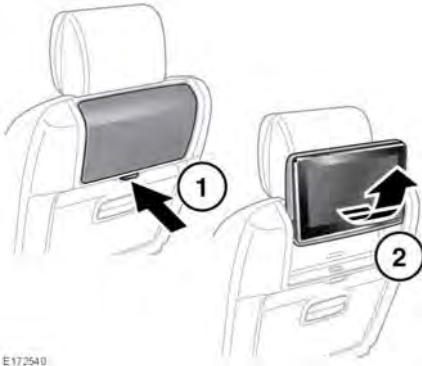

E172540


1. Push the release latch inwards at the bottom of the screen.
2. Pull the underneath edge of the screen to deploy to the open position.

When the display is fully open, the angle can be adjusted by pulling it towards the rear of the vehicle.

**Note:** Care should be taken not to force the display beyond the fully open position.

When folded beyond the horizontal position, the display will switch off in preparation for being stored away. Opening the display, or pushing it back into the open position, will automatically switch it back on.

## REAR SEAT REMOTE CONTROL

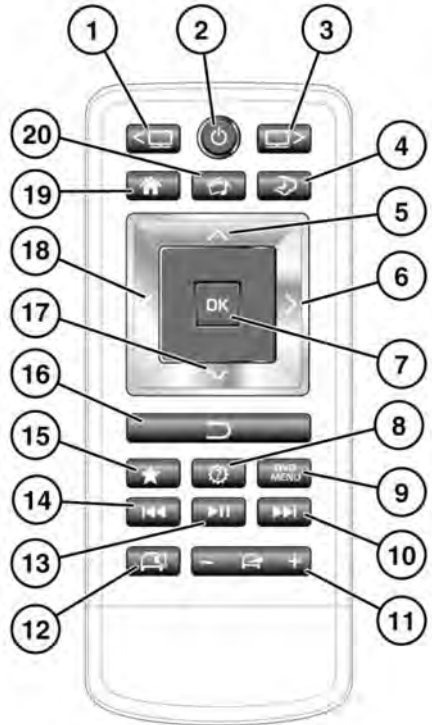

E163208

1. Left screen select, or reactivate the screen when in standby mode (illuminates when selected).
2. Press and release to switch the selected screen on/off (all selected audio from sources will continue). Press and hold to switch off the system completely (audio and video source will stop).
3. Right screen select, or reactivate the screen when in standby mode (illuminates when selected).
4. Press to toggle between the **CLIMATE** and **SEATS** screens.

# Rear seat screens

5. Cursor control: Up\*.
6. Cursor control: Right\*.
7. **OK**: Press to confirm selection.
8. Settings: Some settings for features displayed on the Rear seat screens are available, however, full functionality is controlled from the front Touch screen.
9. DVD menu.
10. Next track/file/channel/station.
11. Cabin audio volume increase/decrease/mute (volume control for the headphones is on the side of the headphones).
12. Cabin audio on/off (when switched off, the headphone's audio will be available).
13. Play/Pause.
14. Previous track/file/channel/station.
15. Mark selection as a favourite.
16. Press to return to a higher menu level.
17. Cursor control: Down\*.
18. Cursor control: Left\*.
19. Shortcut to the rear **HOME** screen.
20. Press once to view the selected media source. Press again to access the **SELECT SOURCE** menu.

\*These are multi-function keys depending on the source selected.

If the remote control becomes unpaired from the rear screens, re-pair via the **Rear Media Settings**, on the **SETTINGS** pop-up menu. Once this is complete, both the Left and Right screen buttons will flash twice. See **106, SYSTEM SETTINGS**.

## REAR SEAT REMOTE CONTROL BATTERY



E147536

Low battery power is indicated by the remote control power button flashing 3 times when pressed.

To renew the batteries:

- Remove the chrome battery cover.
- Install 2 AAA batteries. Make sure the polarity of the batteries matches that shown inside the remote control battery compartment.

**Note:** The remote control will not operate if the batteries are fitted incorrectly.

**Note:** Always use good quality batteries of the same type.

- Replace the chrome battery cover.



Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Retailer/Authorised Repairer and/or your local authority.

## REAR SEAT SCREEN - HOME SCREEN

The rear screens allow rear seat passengers to use selected features that are also available to the front occupants.

The features displayed on the rear screens can only be controlled by using the rear screen remote control. See **135, REAR SEAT SCREENS OVERVIEW**.

The following features are available for use by the rear passengers:

- **Media:** The Media system can be accessed via the rear screens. Some of the features available will be different to the front Touch screen options. See **114, AM/FM RADIO CONTROLS, 118, PORTABLE MEDIA CONNECTIONS, 126, TELEVISION CONTROLS,** and **128, DVD PLAYER CONTROLS**.
- **Navigation:** The Navigation system can be viewed and operated from the rear screens. Some of the features available will be different to the front Touch screen options. See **168, REAR SEAT NAVIGATION**.
- **Seats:** The rear seat heating or cooling temperature can be adjusted via the rear screens. See **141, SEAT COMFORT AND ADJUSTMENT**.
- **Climate:** The Rear climate control system, can only be adjusted via the rear screens. The system can be locked via the front Touch screen. A Padlock icon is displayed when the Rear Climate control system has been locked.

The Rear climate control system cannot be switched off via the rear screens. See **139, REAR CLIMATE CONTROL**.

- **Settings:** Some settings for features shown on the rear screens are available by pressing the Settings button on the remote control, however, full functionality is controlled from the front Touch screen. See **106, SYSTEM SETTINGS**.

## REAR SEAT SCREENS OVERVIEW

To activate the system using the remote control, press the appropriate screen select **(1)** or **(3)**, followed by the on/off button **(2)**.

Select the desired system. Subsequent selections on the remote control will operate the last selected system.

***Note:** To prevent accidental damage, always store the remote control in the stowage area provided, when not in use.*