


# Instrument panel

## INSTRUMENT PANEL

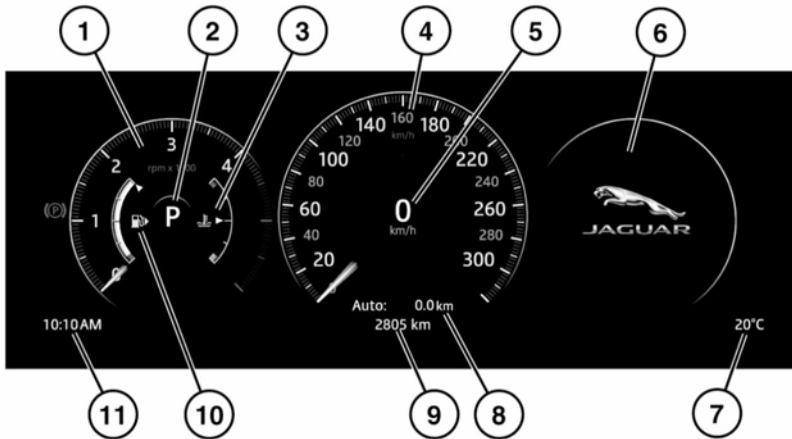

E172915

1. Tachometer.
2. Gear selector position display.
3. Temperature gauge.

**!** Serious engine damage can occur if the vehicle is driven while the engine is overheating.

If the pointer moves onto the red line, the engine is overheating. Stop the vehicle as soon as safety permits and allow the engine to idle until the temperature reduces. If, after several minutes, the temperature does not reduce, switch off the engine and allow it to cool. If the problem persists, seek qualified assistance immediately.

**Note:** If engine overheating occurs, there may be a noticeable reduction in engine power and the air conditioning may cease operation. This is a normal operating strategy, to reduce load on the engine and assist with engine cooling.

4. Speedometer.
5. Current speed.
6. Message centre.

7. External temperature.
8. Trip information.
9. Total distance (odometer).
10. Fuel gauge.

**!** Never allow the engine to run out of fuel. The resultant misfire can seriously damage the catalytic converter.


If the amber low fuel warning lamp illuminates, the vehicle should be refuelled as soon as possible. The approximate distance that can be travelled on the remaining fuel can be viewed via the Trip computer range function.

As a reminder for the location of the fuel filler, there is an arrow head symbol, next to the fuel pump symbol, pointing to the relevant side of the vehicle.

11. Clock.

## INSTRUMENT PANEL MENU

A number of vehicle features and display settings may be configured via the Instrument panel menu.

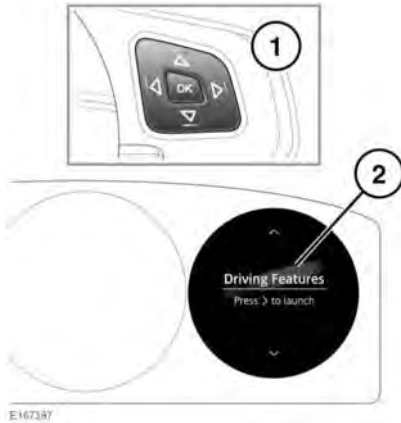

To display and navigate through the Instrument panel menu, operate the menu control on the steering wheel.

1. Steering wheel menu control: Press **OK** to activate the menu, then use as follows:
  - Press the up/down arrow to scroll up or down through a list.
  - Press the right arrow to view a sub-list.
  - Press the left arrow to return to the previous menu.
  - Press the **OK** button to select the highlighted item from a list.
2. Scroll through the Main menu options as follows:
  - **Driving Features**
  - **Trip Computer**
  - **Settings**
  - **Tyre Pressures**

- **Service:** Displays with the ignition on and the engine running.
- **Source**
- **Queue/Favourites:** Dependant on the source selected.
- **Recents:** Displays with the phone connected.
- **Display Theme**
  - Info panel:** Select to change the information displayed within the Instrument panel.
  - Map:** Select to set the Instrument panel to display the full screen navigation map, with guidance and junction view.
  - Theme:** Select to change the appearance of the Instrument panel.

## WARNING AND INFORMATION MESSAGES



**Do not ignore warning messages, take appropriate action as soon as possible. Failure to do so may result in serious damage to the vehicle. If the message is suppressed, an amber or red warning icon will remain illuminated until the cause of the message is rectified.**

For information regarding the individual messages, their meanings, and any action required, please refer to the relevant section within this handbook.

If more than one message is active, each is displayed in turn for 2 seconds in order of priority.

**Note:** Messages are displayed in order of importance, with critical warning messages being the highest priority.

# Instrument panel

Warning messages may be accompanied by an audible warning, and the message text may have the handbook symbol next to it. Warning messages are displayed until the condition causing the fault is rectified or the message is suppressed using the **OK** button on the steering wheel. If the message is suppressed, a warning icon will remain illuminated until the cause of the message is rectified.

## TRIP COMPUTER

The computer memory stores data for a journey or series of journeys until it is reset to zero.

There are 3 trip memories available, A, B and Auto. You can specify which trip memory is viewable using the Instrument panel menu.

## USING THE TRIP COMPUTER



E182473

A short press (1 second or less), or a series of short presses, of the **TRIP** button will change the Trip computer display. The options available are:

- Trip distance.
- Trip average speed.
- Trip average fuel consumption.
- Instantaneous (short term average) fuel consumption.
- Range available from remaining fuel.
- Driving style.
- Blank display.

To reset the Trip computer values to zero, press and hold the **TRIP** button for 2 seconds.

To reset the fuel consumption value, press and hold the **TRIP** button until the display clears.

The distance, average speed and average fuel economy values for trip **A** and trip **B** can be reset. Set the Trip computer display to show the trip that you wish to reset, then press and hold the **TRIP** button until the message **resetting trip** is displayed.

It is not possible to manually reset the Auto trip memory. This resets automatically each time the ignition is switched on.

Trips may be added together, or removed to record a continuous journey. Press the **TRIP** button for longer than 1 second, when Auto trip memory values for distance, average speed and average fuel economy are displayed, then **adding last journey** or **removing last journey** will appear on the screen. Press the **TRIP** button for longer than 1 second, and the previous trip information will be added to or, removed from, the current trip and the new total will be displayed. There is no limit to the number of times this can be done before the ignition is switched off.

## TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

## RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

## METRIC/IMPERIAL/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial and mixed units in the **Trip Computer** menu of the Message centre.

See **41, INSTRUMENT PANEL MENU.**

***Note:** Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of Metric or Imperial units.*

## SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message centre, as either a distance or time left until the service is due.

Once the distance or time are exceeded, the display will show a negative (-) value to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.

Details of the next service can be found in the **Service** Instrument panel menu. See **41, INSTRUMENT PANEL MENU.**