


Headphones

HEADPHONES

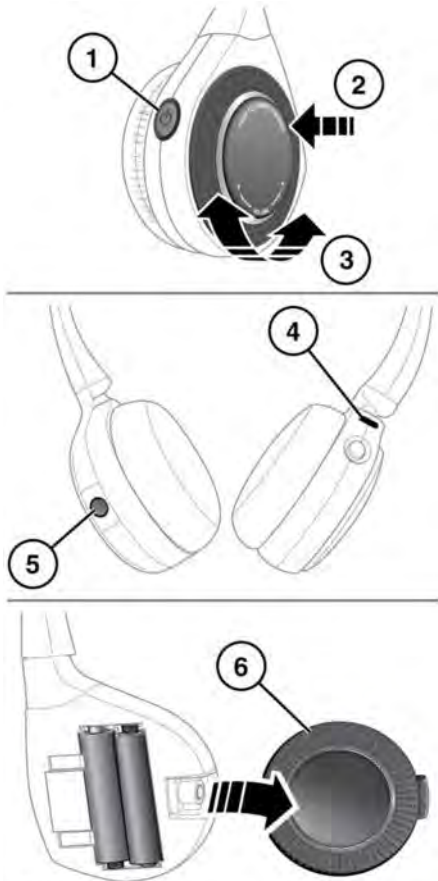

E170640

1. Press to switch the headphones on/off.
2. Press to change the audio channel.
3. Rotate to adjust the headphone volume.
4. The status LED indicator lamp:
 - When a signal is being received, the lamp will illuminate continuously.
 - When a signal is not being received, the lamp will flash.

- When the battery power is low, the lamp will flash and then go out after a short delay.

5. The battery cover retaining screw.
6. The battery access cover.

When the battery power is low, the headphones will emit a beeping sound every 90 seconds.

To replace the batteries, use the following the procedure:

1. Remove the battery access cover retaining screw (5).
2. Pull the cover (6) away from the headphones.
3. Install the new AAA batteries.

Note: Make sure that the polarity of the batteries matches that shown inside the headphone's battery compartment.

4. Replace the battery access cover.

Note: The headphones will not operate if the batteries are fitted incorrectly.

Note: Under normal usage, the expected battery life is 6 months.

Note: Always use good quality batteries of the same type.



Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on battery disposal from a Retailer/Authorised Repairer and/or the local authority.