


## TOUCH SCREEN HOME MENU

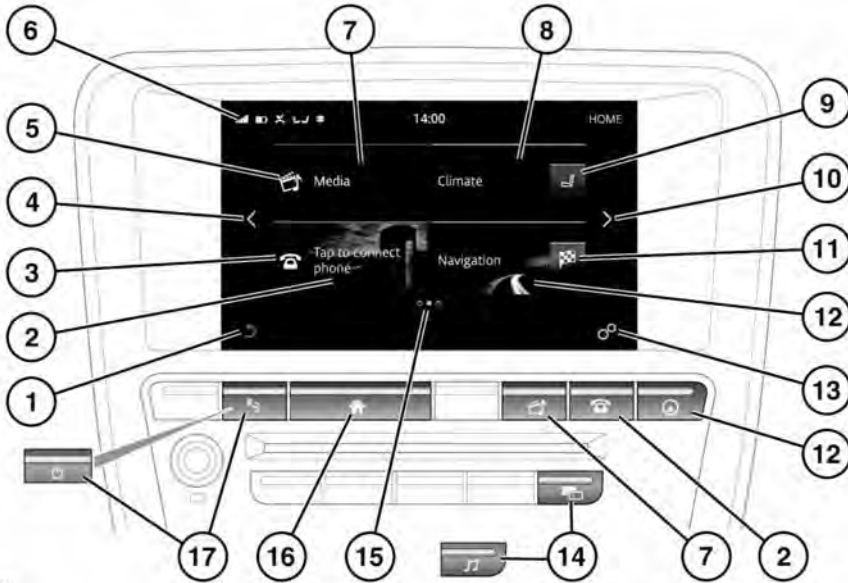

E161929



Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.



Avoid spilling or splashing liquids onto the Touch screen.

1. Touch to return to a higher menu level.

**Note:** The Return icon will be disabled on the **HOME** screen.

2. Touch the screen or press the button, to select the **PHONE** screen.
3. Touch to select **Voicemail** when a phone is connected, or the **PHONE** screen when no phone is connected.
4. Touch the arrow or swipe the screen to the right, to select the **MY HOME** screens.
5. Touch to select the media shortcut:

- CD, **Bluetooth**® and USB: Alternate between play and pause.

- Radio: Station mute. Alternatively, touch to switch the Media system off.

6. Status icons. See **101, TOUCH SCREEN STATUS ICONS**.

7. Touch the screen or press the button, to select the media screen. If the Media system is already switched on, then touch to select the current media source menu.

**Note:** When the system is active, current information for the media being played will be displayed.

8. Touch to select the **FRONT CLIMATE** screen. See **136, FRONT CLIMATE CONTROL**.

9. Touch to select the **SEAT COMFORT** screen. See **141, HEATED SEATS, 142, CLIMATE SEATS, 142, SEAT MASSAGE**.
10. Touch the arrow or swipe the screen to the left, to select the **EXTRA FEATURES** screens.
11. Touch to set a destination or to cancel guidance if a destination is already set.
12. Touch to select the **NAVIGATION** assistance map.
13. Touch to select **Home Settings**, via the **SETTINGS** pop-up menu.
14. Press to switch **DUAL VIEW** on/off or select the **AUDIO SETTINGS** screen (on non-Dual view vehicles).
15. Indicator for the number of available screens. The solid dot indicates the position of the currently displayed screen.
16. Press to select the **HOME** screen, or double press to select the **PREVIEWS** screen.
17. Press to switch Park Assist on/off or to switch the screen on/off (on vehicles without Park Assist fitted).  
For vehicles with Park Assist, the screen can be switched off via the **SETTINGS** pop-up menu.

## TOUCH SCREEN STATUS ICONS

The icons displayed at the top of the screen provide information about the status of the vehicle feature or application.



Phone signal strength indicator.



Phone battery level indicator.



Status of the Heated/Climate seats.



Traffic Alerts.



Wi-Fi signal.



Connecting.



Phone set to divert incoming calls.



Network connection status.

## TOUCH SCREEN USE



Do not use excessive pressure when selecting items on the Touch screen.

Definitions for the various button taps and Touch screen gestures used in this handbook:

- Touch: Briefly touch the screen's surface with your fingertip.
- Touch and hold: Touch the screen's surface for an extended period of time.
- Swipe: Move your fingertip over the screen's surface in a fast linear movement.
- Drag: Touch an object and move it with your fingertip over the screen's surface, without losing contact.
- Pinch: Spread two fingers apart on a map or image to zoom in. Pinch to zoom out.

## TOUCH SCREEN CARE



Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Retailer/ Authorised Repairer.