

Warning lamps

WARNING LAMPS AND INDICATORS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the instrument panel indicate system status.

LAMP CHECK

A warning lamp bulb check is initiated when the ignition system is switched on and lasts for 3 seconds (except for the airbag warning lamp which will remain on for 6 seconds). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages displayed in the Message centre.

Note: Not all warning lamps are included in the check (e.g. high beam headlamps and direction indicators).

CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message centre.

GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message centre.

ENGINE TEMPERATURE (RED)



Illuminates when the engine temperature is too high. The Message centre will also display the message **ENGINE OVERHEATING**.

Stop the vehicle as soon as safety permits and seek qualified assistance before continuing.

LOW OIL PRESSURE (RED)



If the lamp flashes or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately.

Check and top up the oil level, if necessary. Start the engine, if the lamp remains illuminated, switch the engine off immediately and seek qualified assistance before continuing.

BRAKE (RED)



Do not drive if the message Brake Fluid Low is displayed. Check the brake fluid level and top-up as necessary. If necessary, seek qualified assistance before continuing.



Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top-up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

PARKING BRAKE (RED)



Illuminates when the parking brake is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

BATTERY CHARGE (RED)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates while driving, there is a fault with the battery charging system and a message will be displayed in the Message centre. Seek qualified assistance urgently.

SEAT BELT (RED)



Illuminates, accompanied by a chime, when the vehicle is in motion and an occupied front seat belt is unbuckled. The lamp will extinguish when the relevant seat belt(s) is buckled.

Note: Objects on the front passenger seat may activate the seat belt reminder. It is recommended that any objects placed on the front passenger seat are secured using the seat belt. See 23, **USING THE SEAT BELTS**.

BRAKE (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



If the ABS and brake warning lamps are illuminated at the same time, do not drive the vehicle until the fault is rectified. Seek qualified assistance immediately.



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

ENGINE/TRANSMISSION (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates when the engine is running, there is an emissions related fault with the engine or transmission. The vehicle can be driven but may enter limp-home mode with the possibility of reduced performance. Seek qualified assistance as soon as possible.

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

Warning lamps

GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp flashes while driving, the DSC system is active.

A fault with the DSC system is indicated by the warning lamp illuminating and an associated warning message. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off.

If TracDSC is selected, the warning lamp will also illuminate and the message **TracDSC** is displayed for 4 seconds.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when Automatic Speed Limiter is active.

EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

PROGRESS CONTROL SYSTEM (AMBER)



Illuminates to confirm that the Progress control system is enabled.

INTELLIGENT STOP/START OFF (AMBER)



Illuminates when the Intelligent stop/start system is switched off.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

GEAR SHIFT (GREEN)



The Gear shift indicator illuminates briefly at the recommended gear change point (upshift), while in Manual gear selection mode only.

The Gear shift indicator will not illuminate while Cruise control is active, unless Cruise control is over-ridden by pressing the throttle pedal.

Note: *This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.*

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

AUTO HIGH BEAM (GREEN)



Illuminates when the Auto high beam feature has switched on the high beams.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.

Note: *Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.*

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive cruise control is active.

Warning lamps

AUDIBLE WARNINGS AND INDICATORS

Hazard or Condition	Chime or tone/remedy
External lamps remain on when the driver's door is opened.	A chime will sound until the lamps are switched off or the driver's door is closed (unless the lighting control is in the AUTO position).
Hazard warning indicators on.	A ticking will sound until the hazard indicators are switched off.
Direction indicators on.	A ticking will sound until the indicators are switched off.
Memory 1 (2 or 3) settings saved.	A short tone as the memory selection is saved.
Seat belt reminder.	A chime will sound if a seat belt is unbuckled while the vehicle is moving. The warning will cease if the occupied seat's belt is re-buckled, the ignition is switched off or more than 3 minutes has elapsed.
Electric Parking Brake (EPB).	If the EPB is applied while the vehicle is moving, a continuous chime will sound; release the EPB. If there is a fault with the system which would prevent the application of the EPB, a brief sequence of chimes is initiated.
Adaptive Cruise Control (ACC) driver intervene.	Multiple chime. Apply the brakes.
ACC low speed automatic switch off.	A chime will sound to indicate that the ACC system is no longer operating.
Speed is over 15 km/h (9 mph) above the set limit speed.	A short warning chime. Reduce speed.
Gear selector is not in Park (P) with the ignition off.	A chime will sound. Select Park (P).
Entry delay warning (European markets only).	Intermittent slow, low pitched chime. Disarm the vehicle.
The Smart key cannot be detected.	A chime will sound. Hold the Smart key close to the auxiliary switch pack. See 4, UNLOCKING THE VEHICLE.
DSC OFF	A chime will sound.