


AM/FM RADIO CONTROLS

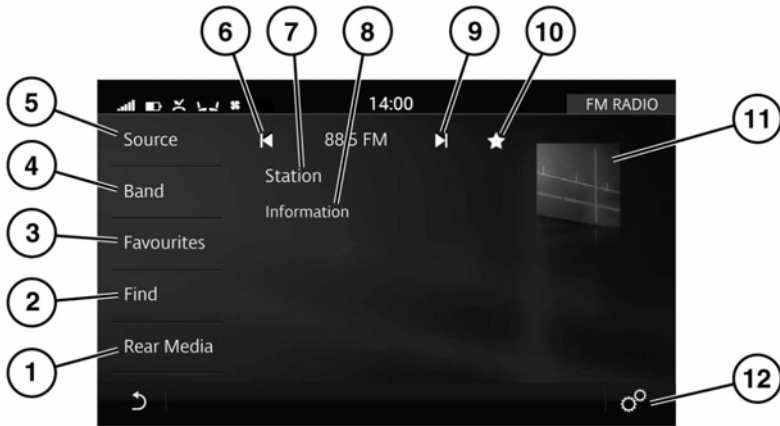

E 162076



In the interest of safety, only operate or adjust the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. Rear Media:** Select for rear media options.
- 2. Find:** Touch to display options for finding a required station, frequency or genre.
 - **STATION LIST:** Touch the Station list icon to display a list of available stations on the selected waveband.
 - **FREQUENCY INPUT:** Touch the Frequency input icon to display the keypad. Enter the required frequency and touch **OK**.
 - **GENRE:** Touch the Genre icon to display a list of available genres. Select the required genre from the list.

- 3. Favourites:** Touch to display a single list of **AM, FM** and **DAB** favourite stations. Touch the star to remove the selected station from the Favourites list. Touch the station frequency or name to select that station and play it.
To rearrange the order of the list, touch the Edit icon. Drag and drop selected items, to the desired position. Touch **OK** to confirm.
- 4. Band:** Touch to view and select a radio band; **AM, FM** or **DAB**. The radio will tune to the last used station on that radio band.
- 5. Source:** Touch to display all media sources.
- 6. Seek down:**
 - Touch or swipe the Touch screen from left to right, to seek down to the next radio station.
 - Touch and hold to activate continuous seek mode.
- 7.** Displays information about the current station.

Touch anywhere on the channel's name or number to view the frequency Input keypad. Enter the required frequency and touch **OK**.

Note: *The keypad will only allow the input of possible frequencies valid for the vehicle's market.*

8. Displays information from the broadcasting station. Touch to view further information (if available); touch again to close the further information display.
9. Seek up:
 - Touch or swipe the Touch screen from right to left, to seek up to the next radio station.
 - Touch and hold to activate continuous seek mode.
10. Touch the Favourite icon to add to or delete from the **Favourites** list. This will be highlighted when the tuned station is set as a favourite.
11. Touch to view further information; touch again to close the further information display.
12. Select **AM/FM Settings** via the **SETTINGS** pop-up menu. Touch to activate/deactivate the following features: **RDS**, **Traffic**, **News**, **Station list order**, **AF** and **REG**. See **115**, **RADIO DATA SYSTEM (RDS)**.

Note: *The Media system provides a 2-channel radio, enabling occupants to listen to 2 different radio stations at the same time (not available in all markets).*

Note: *Electronic devices used within, connected to, or within close proximity to the vehicle, may affect the performance of this system (e.g., radio reception, etc.).*

RADIO DATA SYSTEM (RDS)

Your radio is equipped with an RDS, which enables the Media system to receive additional information with normal FM radio signals.

Note: *Not all FM radio stations broadcast RDS information.*

Select **AM/FM Settings** via the **SETTINGS** pop-up menu, to view or alter the **RDS** settings.

- **RDS:** Select **ON** or **OFF**.
- **Traffic Alerts (TA):** Provides local travel information.
- **News:** Provides news information.
- **Station list order:** List stations by **Name** or **Frequency**.
- **Alternative Frequency (AF):** Select to allow the radio to automatically retune to a stronger AF for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.
- **Regionalisation:** When **ON** it allows an Alternative Frequency (AF) switch to local services that have similar, but not identical content. When **OFF**, it restricts AF switching to alternative services with identical, content only.