


MEDIA CONTROLS



In the interest of safety, only operate, adjust or view the system when it is safe to do so.

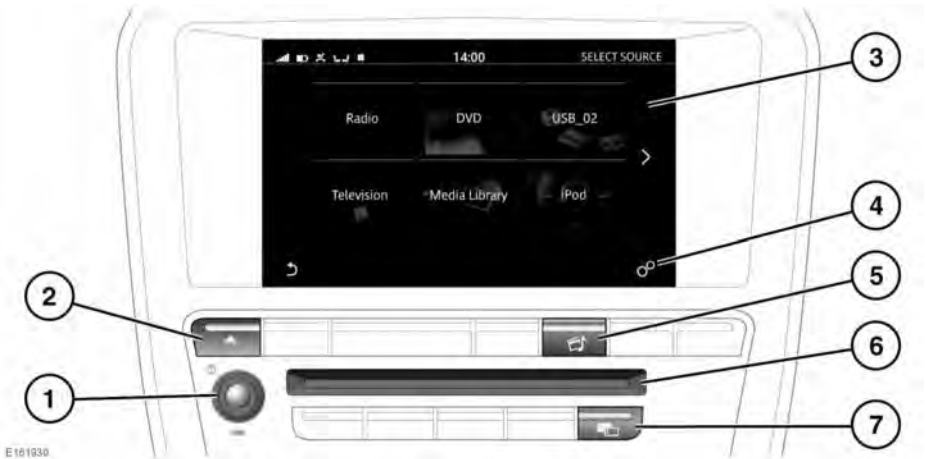

Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. On/off and volume control:

- Press to switch the system on/off.
- Rotate to adjust the volume level (displayed on the Touch screen).


Note: The Media system will operate with the ignition on or off, but will always switch off when the ignition is switched off. Switch the system on again, if required.

Note: If the volume is turned to zero while a Compact Disc (CD) is playing, the CD will pause play. Play will resume when a greater volume is selected.

2. CD/DVD eject button.
3. Media source options.
4. Select **Audio Settings** via the **SETTINGS** pop-up menu. See **109, AUDIO SETTINGS**.

5. Press for direct access to the media screen.
6. CD/DVD loading slot: The player will accommodate one disc at a time. Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.
7. Press to select **DUAL VIEW** or the **Audio Settings** menu. See **130, DUAL VIEW CONTROLS** or **109, AUDIO SETTINGS**.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN

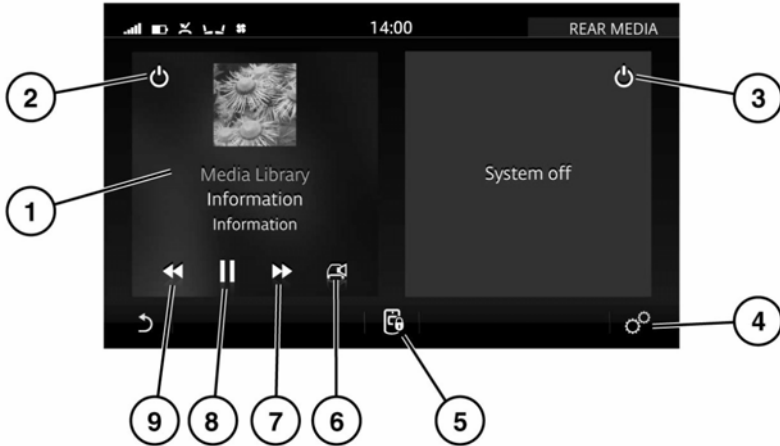


E163107

Touch **Rear Media** on the media screen, to select the **REAR MEDIA** control screen.

1. Touch to select the rear media source.
2. Touch to switch the left-side rear screen on/off.
3. Touch to switch the right-side rear screen on/off.
4. Touch to access the **Rear Media Settings** via the **SETTINGS** pop-up menu.
5. Touch to lock or unlock the remote control.
6. Touch to listen to the selected media via the cabin's audio.
7. Forward/Skip for the selected screen.
8. Play/Pause for the selected screen (if applicable to the source selected).
9. Rewind/Skip for the selected screen.

Note: When the main **REAR MEDIA** control screen is displayed on the Touch screen, the remote control will be locked out.

AUDIO STEERING WHEEL CONTROLS

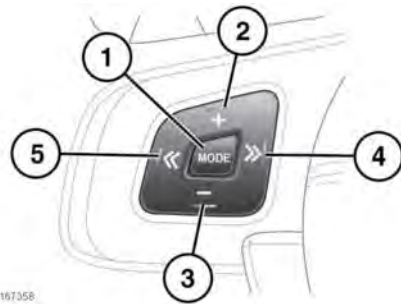

E167358

1. **MODE:** Short press to scroll through all of the media sources.
2. Press to increase the volume for any source.
3. Press to decrease the volume for any source.
4. Seek up:
Short press:

- To select the next radio favourite.
- To select the next track on the chosen media source - CD, MP3, etc.
- When the phone is in use, press to scroll up lists of calls or contact entries.
- To select the next TV channel on the channel list or the next video/DVD chapter.

Long press:

- To auto-seek up the frequency to the next radio station.
- To fast forward the current playing track, video or chapter.

5. Seek down:

Short press:

- To select the previous radio favourite.
- To select the previous track or start of the current track on the chosen media source - CD, MP3, etc.
- When the phone is in use, press to scroll down lists of calls or contact entries.
- To select the previous TV channel on the channel list or the previous video/DVD chapter.

Long press:

- To auto-seek down the frequency to the next radio station.
- To rewind the current playing track, video or chapter.

AUDIO SETTINGS

To view, touch the Settings icon from any screen and then **Audio Settings** via the **SETTINGS** pop-up menu.

To adjust the sound settings:

- Touch **+** or **-** to adjust the **Bass**, **Treble** or **Subwoofer** levels. Alternatively, touch the slider bar and drag or touch anywhere on the bar and release.

To adjust balance and fade:



E162072

Touch the arrows to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and drag it to the required position or touch anywhere on the vehicle graphic and release.

To adjust surround sound settings:

- If **Meridian Surround** or **Meridian Reference** is available, touch **Meridian**, **Dolby Pro Logic IIx** or **DTS Neo:6** to select **Surround sound**. Select **Stereo** to switch **Surround sound** off.

Note: Surround sound options are not available for certain sources where the surround sound mode is set automatically.

LOADING DISCS



To prevent CD mechanism damage, do not insert any object other than a CD/DVD into the disc slot. Objects, such as coins, tickets and cards, will cause a mechanism error and permanent damage to the device.



Do not force the disc into the slot.

Media overview

- ❗ Do not use irregular shaped CDs or DVDs, and those with a scratch protection film or self-adhesive label attached.
- ❗ Do not use mini-sized CDs, even with an adaptor.
- ❗ Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.
- ❗ Recordable (DVD-R or DVD+R) discs may not function correctly.
- ❗ Dual-format and dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and so playback cannot be guaranteed and jamming may occur.

Only use an approved CD cleaning kit.

Only use high quality 12 cm circular discs.

The player will accommodate one CD or DVD disc at a time.

When a CD is loaded, the ripping media option is available. Select **Media Settings**, via the **SETTINGS** pop-up menu.

CONVERSATION ASSIST

Conversation assist uses the vehicle's audio system and the front and rear microphones to enhance the conversation over the vehicle's interior noise.

The Conversation assist controls are located in the **VOLUME SETTINGS** screen.

Select **All Settings** via the **SETTINGS** pop-up menu, and then **Features**. Next select **Media**, followed by **Volume Settings**. See **106, SYSTEM SETTINGS**.

Conversation assist offers 3 options:

- **Off:** Touch to switch the system off.
- **Normal:** Touch to select normal volume.
- **High:** Touch to select high volume.

When active, front passenger voices are reproduced through the rear speakers and rear passengers voices are reproduced through the front speakers. The system is disabled when at a standstill and progressively increases with vehicle speed and background noise.

Note: *The system is disabled when at a standstill, during phone calls, or at higher volumes, for example, when loud music is playing.*

GRACENOTE® END USER LICENSING AGREEMENT

Gracenote Terms of Use

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to do disc or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive licence to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your licence terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote **Privacy Policy** for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.” Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© 2013. Gracenote, Inc. All Rights Reserved.

LICENSING



E135227



E145346



E132539

Manufactured under licence from Dolby Laboratories.

Dolby, Pro Logic, and the double-D symbol are registered trademarks of Dolby Laboratories.



E132540

Manufactured under licence, under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535; 7,003,467 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, and Neo:6 are registered trademarks, & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



E132541



E132542

Manufactured under licence, under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



E132544

Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit www.gracenote.com.

CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.