


## TELEVISION CONTROLS

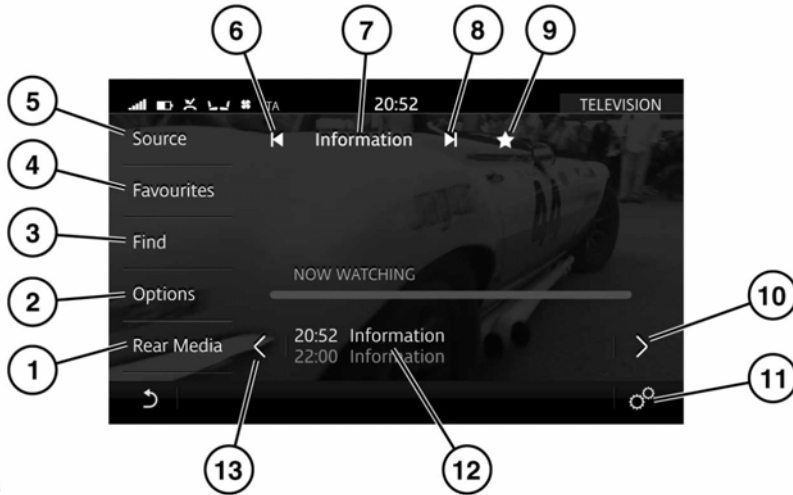

E162515



**In the interest of safety, only operate, adjust or view the system when it is safe to do so.**



**Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

**Note:** While Jaguar continue to work closely with its partners to develop TV standards worldwide, we cannot guarantee the TV feature in all countries at all times.

- 1. Rear Media:** Select for rear media options.
- 2. Options:** Touch to display various TV options.
  - Touch the Zoom icon to zoom in from 16:9/4:3 to fit screen. Touch again to zoom out.
  - Touch the Audio icon to access available alternative audio tracks for the current broadcast.

- Touch the Video icon to access available alternative video feeds for the current broadcast.

- 3. Find:** Touch to display options for finding a TV channel/programme.

- **CHANNEL LIST:** Touch the icon to view a list of available channels. Select the up or down arrows to scroll through the list or swipe the Touch screen up or down. Touch the name of the channel to tune to and view that channel.

- **WHAT'S ON:** Touch the icon to view the Electronic Programme Guide (EPG).

To set a programme reminder: Select a programme that is currently not broadcasting, to display a summary page. Select **Set Reminder**. Once set, an icon will display in the EPG. Only 4 reminders can be set for the same time.

To view a programme currently being broadcast, select the required programme to display a summary page. Select **View Now** to tune to that channel. The selected programme displays in full screen view.

***Note:** The TV system is continually checking the availability of channels. It is possible for a channel to be in the list, but not actually available (e.g., when driving through different transmitter regions).*

4. **Favourites:** Touch to display a single list of favourite stations. To rearrange the order of the list, touch the Edit icon in the footer. Drag and drop selected items to the desired position. Press **OK** to confirm.
5. **Source:** Touch to display all radio and media options.
6. **Seek down:** Touch or swipe the Touch screen from left to right, to tune to and view the previous channel in the TV channel list.
7. Current channel and programme title display.
8. **Seek up:** Touch or swipe the Touch screen from right to left, to tune to and view the next channel in the TV channel list.
9. Touch to add/delete from the **Favourites** list.
10. Touch to browse to the next TV programme. Touch the programme banner to tune to the browsed channel.
11. Select **TV Settings** via the **Settings** pop-up menu. Select for **Traffic Alerts (TA)**, **News**, **Parental Lock**, **BCAS Serial Number**, **Channel Lock**, **Genre Lock**, and **Rating Lock**.
12. Displays the current TV programme playing and what's playing next.

13. Touch to browse to the previous TV programme. Touch the programme banner to tune to the browsed channel.

For information on the use of the audio/video controls on the audio unit and steering wheel, see **107, MEDIA CONTROLS**.