


FRONT CLIMATE CONTROL

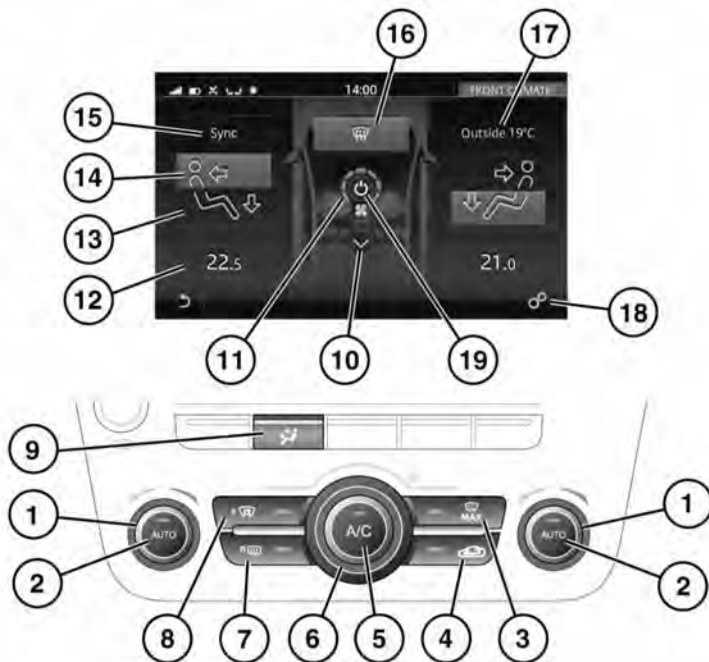

E183792

To access the **FRONT CLIMATE** screen, select **Climate** from the **HOME** screen or press the Climate button.

1. Temperature control: Rotate to adjust the temperature (16°C - 28°C). The temperature is displayed on the Touch screen. On the driver's side only, **HI** (high) or **LO** (low) can be selected.
2. **AUTO** control: Press to switch automatic operation on.

Note: *AUTO mode is the recommended normal operating mode. The Air Conditioning (A/C) and heating and ventilation controls automatically provide an optimum environment at the selected temperature.*

Note: *The temperatures displayed on the FRONT CLIMATE screen are indicators only. When viewing the REAR CLIMATE screen, these indicators become active and can be changed directly via the Touch screen.*

3. Defrost: Press to activate the blowers, A/C and the front and rear screen heaters and to prohibit recirculation.
4. Recirculation: Select to recirculate air inside the vehicle. Press briefly to select timed recirculation. Recirculation will switch off automatically after a set time (dependent on the ambient temperature).

Press and hold to select latched recirculation. Recirculation will remain on until the button is pressed again.

Note: *Prolonged use at low temperatures may cause the windows to mist.*

5. Air Conditioning A/C: Press to switch on/off. The A/C system can be switched on/off independently of the other Climate control functions.
6. The blower speed: Rotate to adjust the blower speed.
Blower speed is automatically set in AUTO mode. Adjusting the blower speed will cancel AUTO mode.
With the blower speed set at minimum, rotate the control counter-clockwise to switch the Climate control system off.
7. Rear screen heater: Press to switch on/off. If left on, it will deactivate after a timed period, dependent on the outside temperature.
8. Front screen heater: Press to switch on/off. If left on, it will deactivate after a timed period, dependent on the outside temperature.
Note: *In cold ambient conditions, the front and rear screen heaters will switch on automatically when the engine is started. This function can be switched on/off via **Climate Settings**.*
9. Press to access the **FRONT CLIMATE** screen on the Touch screen.
10. Select the down arrow or swipe down the screen to view the **REAR CLIMATE** menu. Select the up arrow or swipe up the screen to return to the **FRONT CLIMATE** menu. See **139, REAR CLIMATE CONTROL**.
11. Blower speed indicator: Only displays in manual mode.
12. Temperature display.

13. Air distribution to the feet: Touch to switch on/off.

14. Air distribution to the face: Touch to switch on/off.

15. **Sync:** Select to change all the front and rear passenger climate settings to match that of the driver.

16. Air distribution to the front windscreen: Touch to switch on/off.

17. External temperature display.

Note: *When the external temperature is low enough that ice may be present on the road, an amber snowflake warning lamp will illuminate in the Instrument panel. See **46, EXTERNAL TEMPERATURE (AMBER)**.*

18. Select **Climate Settings** via the **SETTINGS** pop-up menu. From this menu, the temperature units can be changed and automatic deployment of the front and rear heated screen function can be switched on/off. Also, the sensitivity of the **Air purity** and the **Auto air flow** speed can be adjusted, see **138, AIR QUALITY SENSOR**.

19. Select to switch the front and rear Climate control systems on/off.

Note: *Some functions are not available on all vehicles.*

Note: *If the Climate control system is switched off, pressing an AUTO button or the Defrost button will switch the Climate control system on.*

Note: *Water expelled by the A/C system may collect underneath the vehicle when parked. This is not a cause for concern.*

AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the Climate control system will monitor exterior air pollution and humidity, and select recirculation if either reaches a predetermined level. This feature only operates when the **Air purity** function is active. The sensitivity of the air quality sensor can be set via the **Climate Settings** screen. See **138, AIR QUALITY SENSOR**.

AIR QUALITY SENSOR

The sensitivity of the **Air purity** can be adjusted:

1. Select **Climate Settings** via the **SETTINGS** pop-up menu. See **136, FRONT CLIMATE CONTROL**.
2. Select **Air purity**, and then next select the appropriate level; **Low**, **Medium** or **High**. To deactivate, touch **OFF**.

REAR CLIMATE CONTROL



E173022

To access the **REAR CLIMATE** screen from the Touch screen, swipe down the vehicle graphic or select the down arrow from the **FRONT CLIMATE CONTROL**. See **136, FRONT CLIMATE CONTROL**.

Alternatively, to access the **CLIMATE** screen from the rear screen, press the Climate button on the rear remote control. See **135, REAR SEAT SCREENS OVERVIEW**


1. **Temperature adjustment:** Select the red arrow to increase and the blue arrow to decrease the temperature. The temperature setting is displayed between the arrows.
2. **Air distribution to the feet:** Touch to switch on/off.
3. **Air distribution to the face:** Touch to switch on/off.
4. **AUTO:** Select to switch automatic operation on.

5. **Rear panel lock:** Select to disable the Rear climate control switches, in order to prevent the rear passengers from adjusting the Rear climate settings. Select again to re-enable the controls (front screen only).
6. Select the up arrow or swipe up the vehicle graphic to view the **FRONT CLIMATE** screen. Select the down arrow to return to the **REAR CLIMATE** screen (front screen only).

In addition to the selectable controls, the **REAR CLIMATE** screen displays symbols that indicate the status of heating and ventilation functions.

Note: If the Climate control system is switched off, pressing a rear **AUTO** button will switch the system on.

Note: If the system is in Defrost mode, all rear controls are disabled and no airflow is available to the rear occupants.

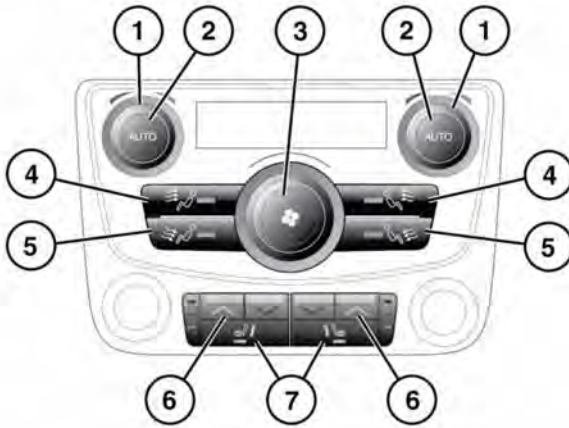

E 163706

The Rear climate can be set with the controls located in the rear centre console.


1. Temperature control: Rotate to adjust the temperature (16°C - 28°C). The temperature is displayed on the Touch screen (**REAR CLIMATE** screen).
2. **AUTO** control: Press to switch automatic operation on/off.
3. Blower speed: Rotate to the adjust blower speed.
4. Air distribution to the face: Press to switch on/off. The switch indicator illuminates when on.
5. Air distribution to the feet: Press to switch on/off. The switch indicator illuminates when on.
6. Seat temperature control: Press the red arrow to increase and the blue arrow to decrease the temperature. The LEDs illuminate to indicate the current setting.
7. Climatic seat zone control: Press to select **full seat, cushion only** or **back only** heating or cooling temperature. The switch indicators illuminate accordingly.

In addition to the selectable controls, the **CLIMATE** screen displays symbols that indicate the status of heating and ventilation functions.

Note: If the Climate control system is switched off, pressing a rear **AUTO** button will switch the system on.

Note: If the system is in Defrost mode, all rear controls are disabled and no airflow is available to the rear occupants.

SEAT COMFORT AND ADJUSTMENT

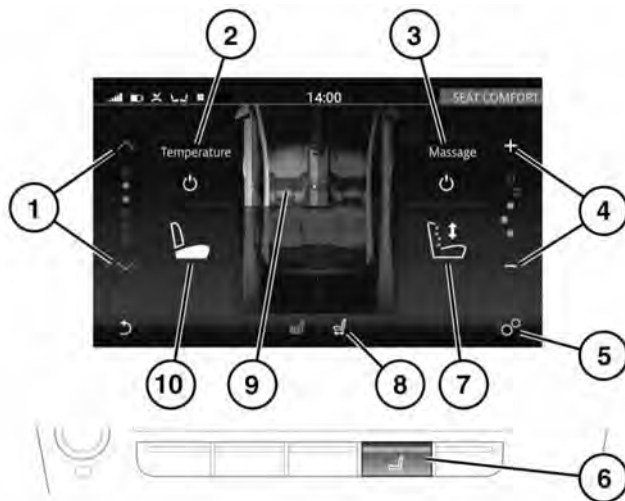

E163705

To access the **SEAT COMFORT** screen, select the Seats icon on the **HOME** screen or press the Seats button on the fascia. See **100, TOUCH SCREEN HOME MENU**.

Rear seat passengers are able to control the seat heating or cooling temperature via the switches on the rear centre console or from the rear screens. See **17, REAR SEAT MASSAGE** or **135, REAR SEAT SCREENS OVERVIEW**.

1. Temperature control: Select the red arrow to increase and the blue arrow to decrease seat heating or cooling temperature
2. Seat temperature on/off.
3. Switch the seat massage on/off. See **142, SEAT MASSAGE**.
4. Vary the intensity of the selected massage program (front seats only).
5. Select **Seat Settings** via the **SETTINGS** pop-up menu.
6. Seats button: Press to display the **SEAT COMFORT** screen.

Alternatively, select the Seats icon on the **HOME** screen, or select **Seats** from the **EXTRA FEATURES** screen. See **104, EXTRA FEATURES**.

7. Select the seat massage program.
8. Touch the Seat adjust icon to toggle between the **SEAT COMFORT** and **SEAT ADJUST** screens. See **144, REMOTE SEATS**.
9. Select the required front or rear seat position.
10. Select the required seat zone for heating and cooling temperature position. See **142, CLIMATE SEATS**.

HEATED SEATS

Note: The seat heaters will only operate when the engine is running.

Climate and comfort

Rear seat passengers are able to control seat heating via the switches on the rear centre console or from the rear screens. See **17, REAR SEAT MASSAGE** or **135, REAR SEAT SCREEN - HOME SCREEN**.

The Heated seats are controlled through the Touch screen.

To access the heating controls for front and rear seats:

- Press the Seats button on the fascia.
- Or, select the Seats icon on the **HOME** screen.
- Or, select **Seats** from the **EXTRA FEATURES** screen. See **104, EXTRA FEATURES**.

Select the required front or rear seat position. Press the Power icon to switch the selected seat heating on/off.

To adjust the seat heating:

- Touch the red arrow to increase the heating.
- Touch the blue arrow to reduce the heating.

Alternatively, swipe the scale up or down to the required level of heating.

CLIMATE SEATS

Note: The Climate seats will only operate when the engine is running.

Rear seat passengers are able to control seat temperature via the switches on the rear centre console or from the rear screens. See **139, REAR CLIMATE CONTROL** or **135, REAR SEAT SCREEN - HOME SCREEN**.

To access the temperature controls for front and rear heated and cooled seats:

- Press the Seats button on the fascia.
- Or, select the Seats icon on the **HOME** screen.
- Or, select **Seats** from the **EXTRA FEATURES** screen. See **104, EXTRA FEATURES**.

Select the required front or rear seat position. Press the Power icon to switch the selected seat temperature on/off.

To adjust the seat temperature:

- Touch the red arrow to increase the temperature.
- Touch the blue arrow to reduce the temperature.

Alternatively, swipe the red/blue scale up or down to the required temperature.

To select the seat zone:

- Touch the Seat zone icon.
- Select the zone: **Back, Base** or **All**.

Seat zone selection is also available by pressing the selected seat position on the vehicle graphic.

SEAT MASSAGE

Note: Seat massage will only operate when the engine is running.

Seat massage may not operate when the vehicle's interior temperature is below 0°C or above 50°C.

Rear seat passengers are able to control seat massage via the switches on the rear centre console or from the rear screens. See **17, REAR SEAT MASSAGE** or **135, REAR SEAT SCREEN - HOME SCREEN**.

Front and rear seat massage can be controlled through the front Touch screen:

To access the seat massage controls for the front and rear:

- Press the Seats button on the fascia.
- Or, select the Seats icon on the **HOME** screen.
- Or, select **Seats** from the **EXTRA FEATURES** screen. See **104, EXTRA FEATURES**.

Select the required front or rear seat position. Press the Power icon to switch the selected seat massage on/off.

To adjust the seat massage program:

- Select the Seat massage program icon.
- Select the appropriate icon for **Wave, Up, Down, Shoulder** or **Lumbar** massage.

***Note:** Only **Wave, Shoulder** or **Lumbar** massage, is available for rear seats.*

To adjust the seat massage intensity:

- Touch the + or - icon to vary the intensity of the selected program. Alternatively, swipe the scale up or down to the required massage intensity.


***Note:** Seat massage intensity is only available for front seats.*

To set Auto Massage:

- Select **Seat Settings** via the **SETTINGS** pop-up menu. See **144, SEAT SETTINGS**.

***Note:** The massage programs have a 10 minute cycle, which will need to be reselected for repeated use.*

REMOTE SEATS

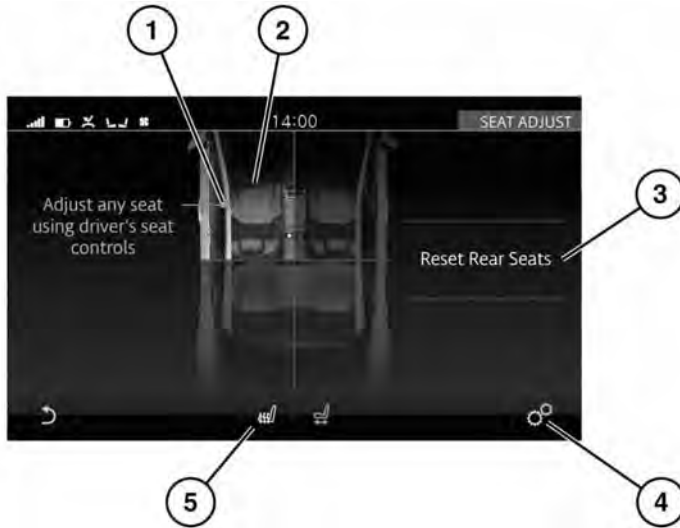

The front and rear passenger seats can be controlled by the driver's seat adjustment controls. To select the remote seat controls screen, touch the Seat adjust icon to toggle between the **SEAT COMFORT** or **SEAT ADJUST** screens. See **141, SEAT COMFORT AND ADJUSTMENT**.

1. Driver's seat adjustment controls.
2. Select the front or rear seat position to be adjusted. Once selected, the driver can adjust the seat using the seat adjustment controls on the side of the driver's seat.
3. **Reset Rear Seats:** Touch to enable the memory function. Use button 3 on the driver's side to reset the rear seats to the home position. See **14, DRIVING POSITION MEMORY**.
4. Select **Seat Settings** via the **SETTINGS** pop-up menu. See **144, SEAT SETTINGS**.

5. Touch the Seat comfort icon to toggle between the **SEAT ADJUST** or **SEAT COMFORT** screens.

SEAT SETTINGS

Select **Seat Settings** via the **SETTINGS** pop-up menu:

- **Easy Entry Exit** on/off:
When **Easy Entry Exit** is enabled, the rear seats will automatically return to their normal position when a rear door is opened. The left or right side seats will be activated by the corresponding door.
- **Auto Massage** on/off:
A time delay can be set from the start of a journey. Press **Time delay** to select the time options.