

## MY HOME SCREEN



E166777

The **MY HOME** screen enables the user to display and arrange widgets and shortcuts to applications.

1. **MY HOME** screen: Multiple screens are available.
2. Widgets and shortcuts: These are available in different sizes and can be moved to different locations.
3. Personalised **MY HOME** screen name: Touch to edit.
4. Touch the arrows or swipe the screen to view other **MY HOME** screens, or return to the **HOME** screen.
5. Edit icon: Touch to display edit mode.

## EDITING SHORTCUTS, WIDGETS AND SCREENS

**Adding a widget:** Touch the Edit icon or touch and hold the screen to display edit mode. Next, touch any of the + symbols on the screen and select from the available categories in the footer. Scroll through the gallery of widgets using the direction arrows or by using a swipe action. Touch to select a widget; this will then display on the **MY HOME** screen.

**Moving a widget:** Touch and hold the screen, then drag the widget to a new location. To move the widget to another **MY HOME** screen, drag it to the side of the screen.

**Resizing a widget:** When the widget has been selected, moved to a new location, or newly created, a resize toggle will be displayed. Touch the toggle to resize the widget.

**Delete a widget:** Touch and hold the screen, then drag the widget to the delete bar.

**Edit a personalised screen name:** Touch the screen name and enter text using the keyboard; touch **OK** to complete.

**Moving a screen:** Pinch the screen or double press the Home button to display **PREVIEWS** of the **HOME**, **MY HOME** and **EXTRA FEATURES** screens. Touch the preview to display the chosen screen. Touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and drag the screen preview to the required position.

**Adding a screen:** While in the **PREVIEWS** screen, touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch the + symbol to create a new **MY HOME** screen. When adding or moving a widget, it can be dragged to the left side of the screen; this will then create a new **MY HOME** screen.

**Note:** *A maximum of 4 MY HOME screens can be added.*

**Deleting a screen:** While in the **PREVIEWS** screen, touch the Edit icon or touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and hold the chosen **MY HOME** screen and drag it to the delete bar and release.