

Touch screen - Extra features

EXTRA FEATURES

Touch the Extra feature to launch the required application or setting screen:

- **Rear Media:** See **108, REAR MEDIA CONTROL FROM THE TOUCH SCREEN.**
- **Eco Data:** The Eco Data system is designed to help the driver maximise fuel economy by providing vehicle data and driving tips. Real time Eco Data can also be displayed in the Instrument panel.
- **Cameras:** See **153, SURROUND CAMERA SYSTEM.**
- **InControl Apps:** See **182, INCONTROL APPS.**
- **Live:** See **182, INCONTROL PRO SERVICES.**
- **Seats:** See **141, SEAT COMFORT AND ADJUSTMENT.**
- **Valet Mode:** See **104, SELECTING VALET MODE.**
- **Contacts:** See **159, CONTACTS.**
- **Voice:** See **175, USING VOICE CONTROL.**
- **Bluetooth:** See **122, PAIRING AND CONNECTING USING THE MEDIA PLAYER.**
- **Settings:** See **106, GENERAL SETTINGS.**

***Note:** The number of Extra features will vary, depending on the specification of the vehicle.*

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment and glovebox. Valet mode also prevents operation of the Touch screen, to prevent access to phone numbers or navigation addresses. Only essential driver assist features are available, such as Cameras, Parking Aid, etc.

Valet mode can be activated by using the **Master PIN** (set in Settings) or by using a temporary PIN (if the Master PIN is unknown), to allow someone other than the owner to set Valet mode.

When set with the Master PIN, only the Master PIN can unlock Valet mode. When set with a temporary PIN, the temporary PIN or the Master PIN will unlock Valet mode.

To select Valet mode:

1. Touch **Valet Mode** in the **EXTRA FEATURES** screen.
2. Enter the **Master PIN** or a memorable 4 digit temporary PIN. If using a temporary PIN, you will be prompted to confirm the PIN. If you wish to cancel the PIN, touch the Return icon. If the confirmation PIN is incorrectly entered, you will be prompted to enter the PIN again. See **106, GENERAL SETTINGS.**
3. The **VALET MODE** screen is displayed to indicate that a PIN has been accepted and **Valet Mode** is active.

The luggage compartment and glovebox are now securely locked in Valet mode and the **Valet Mode On** screen is displayed.

DESELECTING VALET MODE

To deselect Valet mode:

1. When you re-enter the vehicle, touch the screen.
2. Enter your Master PIN or temporary PIN (if used to set) and touch **OK.**

Home screen is displayed to indicate that the PIN has been accepted and Valet mode has been deactivated.

- The luggage compartment and glovebox will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: *If the Master PIN is forgotten, Valet mode can only be deactivated by your Retailer/ Authorised Repairer.*