


DVD PLAYER CONTROLS

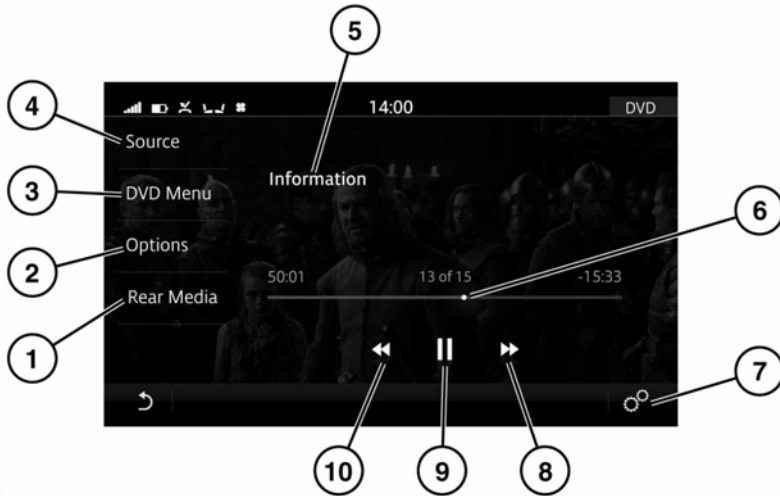

E167115



In the interest of safety, only operate, adjust or view the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. Rear Media:** Select for rear media options.
- 2. Options:** Touch to access **Zoom In/Out**, **Audio**, **Angle** and **Subtitle** options.
Note: The options displayed are dependent on the inserted DVD options.
- 3. DVD Menu:** Touch to access the DVD menu.
 - Top Menu:** Only displayed if supported by the DVD.
 - Resume:** Touch to resume play.
 - Menu navigation keys: Touch to move the menu up or down.
Note: The DVD menu can also be selected by touching the screen in full screen mode.
- 4. Source:** Touch to display all media options.

- 5. DVD information:** Touch to select full screen mode.
Touch the screen again to view the controls at any time. Alternatively, swipe the Touch screen, to seek the previous/next chapter.
- 6. Interactive time progress bar:** Touch or drag to move forward/back through the current DVD.
- 7. Select DVD Settings** via the **SETTINGS** pop-up menu. Touch to activate/deactivate the following features: **Traffic** and **News**.
- 8. Seek up:** Touch to view the next DVD chapter; touch and hold to fast forward.
- 9. Pause/Play:** Touch to pause playback. Touch again to resume playback.
- 10. Seek down:** Touch to view the previous DVD chapter; touch and hold to rewind.

For information on the CD/DVD loading slot and eject button, and the use of the media controls on the Media system and steering wheel, see **107, MEDIA CONTROLS**, **108, AUDIO STEERING WHEEL CONTROLS**, and **109, LOADING DISCS**.