


ELECTRIC SEATS

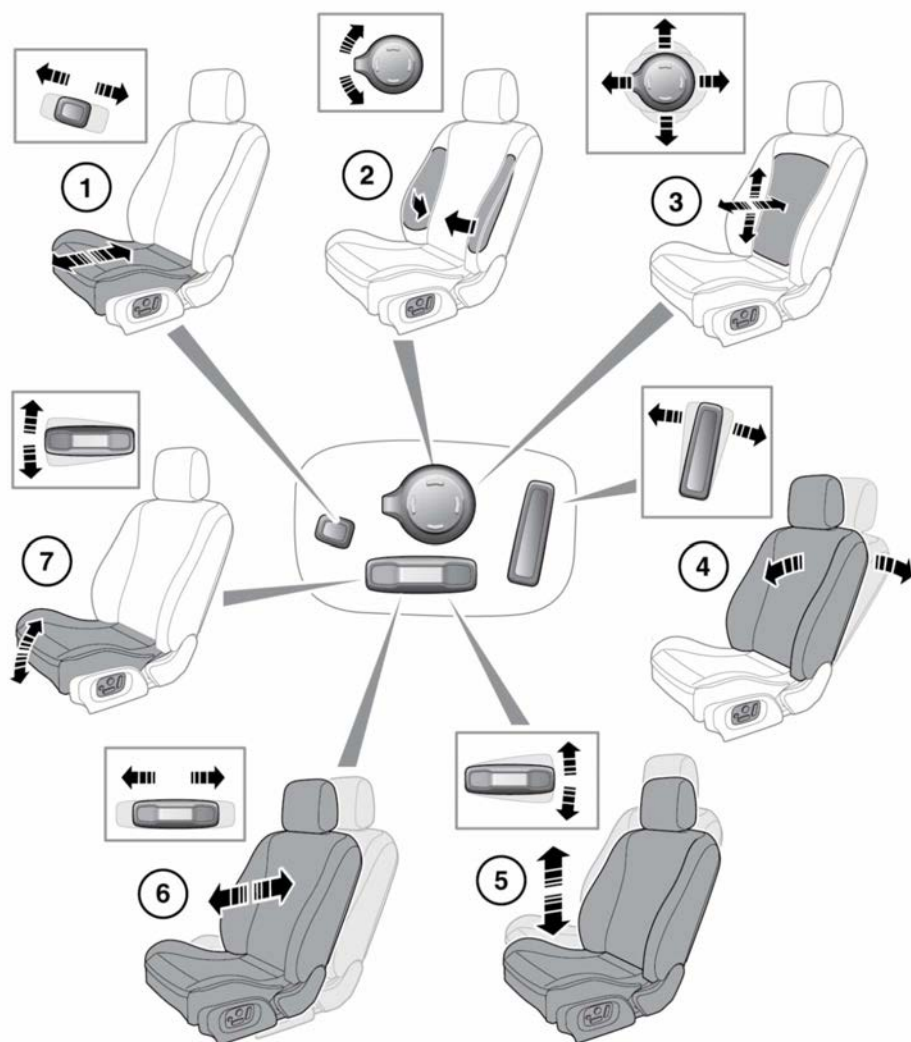

E164795

Front seats

⚠ WARNING

Do not adjust the seat while the vehicle is moving. Doing so could cause a loss of vehicle control and personal injury.

1. Cushion length adjustment.
2. Bolster adjustment (inflate/deflate).
3. Lumbar support adjustment.
 - Press the top of the button to raise.
 - Press the bottom of the button to lower.
 - Press the front of the button to inflate.
 - Press the rear of the button to deflate.
4. Seatback angle adjustment.
5. Height adjustment.
6. Forward and rearward adjustment.
7. Cushion front tilt adjustment.

To adjust the seats, the Smart key must be in the vehicle and the ignition switched on.

If an obstruction is encountered while the seat is in motion, the seat will stop moving and further movement will be restricted until reset.

To reset the seat:

1. Remove the obstruction.
2. Adjust the seat to the point where the movement was restricted.
3. Press and hold the switch for at least 2 seconds to override the restriction.

SITTING IN THE CORRECT POSITION

⚠ WARNING


Riding with a reclined seatback increases your chance of serious or fatal injuries in the event of a collision or sudden stop. The protection of your restraint system (seat belts and air bags) is greatly reduced by reclining your seat. Seat belts must be snug against your hips and chest to work properly. The more the seatback is reclined, the greater the chance that an occupant's hips will slide under the lap belt or the occupant's neck will strike the shoulder belt. Drivers and passengers should always sit well back in their seats, properly belted, and with the seatbacks upright.

⚠ WARNING

Never adjust the driver's seat while the vehicle is moving. Any sudden or unexpected movement of the seat could cause you to lose control of the vehicle resulting in an accident.

The seat, head restraint, seat belt and air bags, all contribute to the protection of the user.

Correct use of these components will give you greater protection; therefore, you should always observe the following points:

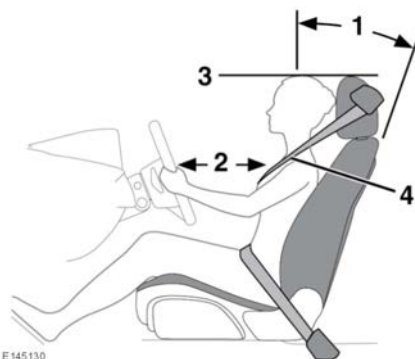

1. Sit in an upright position, with the base of your spine as far back as possible. To achieve optimum benefit of the seat belt in the event of an accident, do not recline the seat excessively.
2. Do not move the driver's seat too close to the steering wheel. Ideally, a minimum distance of 10 inches (254 mm) is recommended between the breastbone and the steering wheel air bag cover. Hold the steering wheel in the correct position, with your arms slightly bent.
3. Adjust the head restraint so that the top of the head restraint is above the center-line of the head.
4. Position the seat belt so that it crosses your chest, midway between your neck and your shoulder. Fit the strap tightly across your hips; not across your stomach.

Make sure that your driving position is comfortable and enables you to maintain full control of the vehicle.


⚠ WARNING

Do not sit or lean unnecessarily close to the air bag. An inflating air bag can cause serious injury or even death. Always fasten your seat belt properly and position the seat so that you can sit as far back as possible from the air bag and still comfortably reach all of the controls.

DRIVING POSITION MEMORY

The driver's seat, steering column and exterior mirror positions can be saved to the vehicle's memory.

Once you have adjusted the power-operated driver's seat, steering column and the exterior mirrors, memorize the settings as follows:

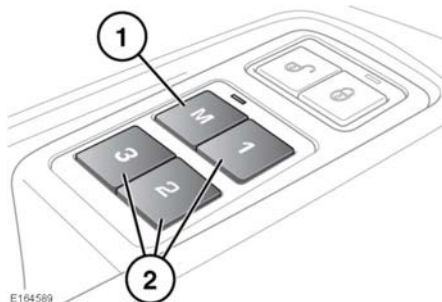

1. Press the memory set button (**M**) to activate the memory function. The LED indicator lamp will illuminate to confirm.
2. Press one of the preset buttons within 5 seconds to memorize the current settings. A confirmation message will be displayed in the Message center, accompanied by an audible chime to confirm the settings have been memorized.

Note: A seat position can only be memorized during the 5 second period.

Note: Any existing settings will be overwritten when a new position is saved to the memory.

RECALLING A MEMORIZED POSITION

⚠ WARNING

Before activating the seat memory, make sure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.

Press the appropriate memory preset button. For the driver's settings, a confirmation will be displayed in the Message center.