

## LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilizes very high voltages. Do not touch any ignition components while the ignition is switched on.

Extra information labels may also be found at these locations.

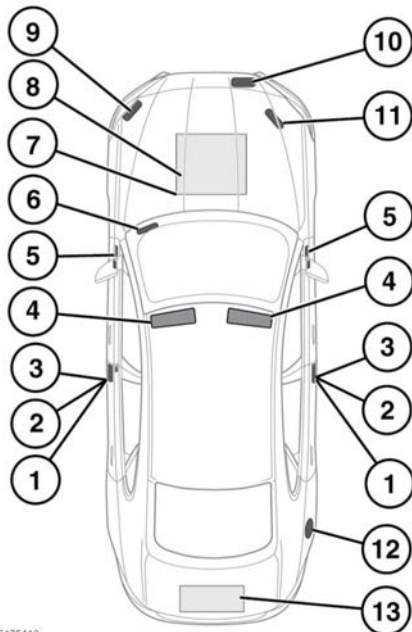

E175413

1. The vehicle weights and the Vehicle Identification Number (VIN) label: Located at the base of the driver's side B pillar. The VIN can also be shown in the Message center via the **Vehicle Information** and **VIN Display** menus. See **47, INSTRUMENT PANEL MENU**.  
*Note: If you need to communicate with a Retailer/Authorized Repairer, you may be asked to quote the VIN number.*
2. Tire pressure label: Located at the base of the driver's side B pillar.
3. Air bag warning label: Located midway up the B pillar.
4. Air bag label: Located on the sun visors.
5. Passenger air bag label: Located at the passenger end of the facia panel.
6. VIN: Stamped on a plate, which is visible through the bottom left-side of the windshield.

# Vehicle labels

7. Engine serial number: Stamped into the left-side rear of the engine casing.
8. Engine serial number label: Located at the top of the engine. Remove the engine cover for access.
9. Air Conditioning (A/C) label: Located on the left-side hood locking platform.
10. Exhaust emissions label: Located on the underside of the hood.
11. VIN number: Stamped onto the suspension turret.
12. Fuel specification label: Located on the inside face of the fuel filler flap.
13. Battery warning symbols label: Located on the top face of the vehicle's main battery, underneath the luggage compartment floor panel.

It is important that you are familiar with these subjects, to make sure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.