


## ELECTRIC WINDOWS

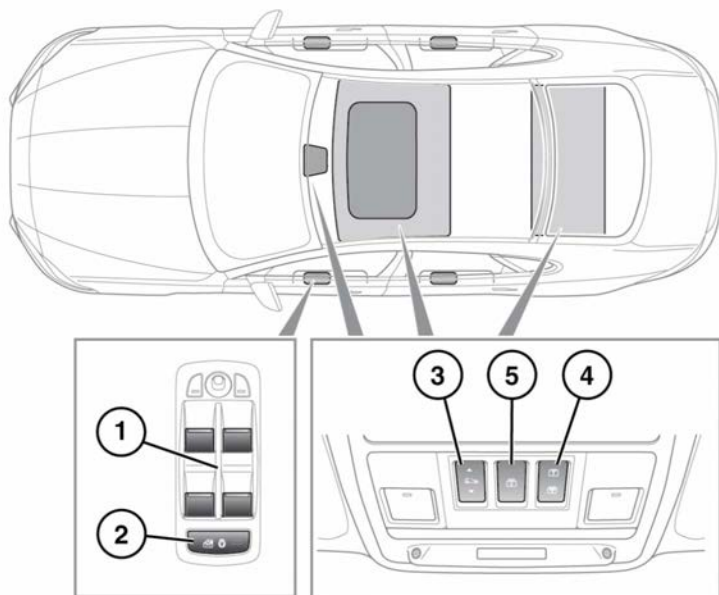

E177184

### 1. Window switches:

**Note:** Each switch has a 2-stage operation. Lightly press/pull and hold to manually operate to the required position. Alternatively, press/pull fully and release for fully (one-touch) automatic operation. Fully automatic operation can be halted at any time, by operating the switch again.

- Press the front of the switch to partially/fully open.
- Pull the front of the switch to partially/fully close.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

### **⚠ WARNING**

Make sure that you remove the Smart key when leaving the vehicle. This will prevent unsupervised operation of the windows and sunroof, which may result in an injury.

### **NOTICE**

Any ice must be removed from the windows before operating.

2. Rear window isolator and child safety locks. See 34, **CHILD SAFETY LOCKS**.

### **⚠ WARNING**

If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children, there is a risk of serious injury or death.

### 3. Sunroof:

**Note:** The front and rear of the switch has a 2-stage operation. Lightly press and hold to manually operate to the required position. Alternatively, press fully and release for fully (one-touch) automatic operation. Fully automatic operation can be halted at any time, by pressing the switch again.

- With the sunroof closed, press the rear of the switch to partially/fully raise the sunroof to the tilt position. Press the rear of the switch again to partially/fully open the sunroof.

**Note:** If the sunroof blind is closed, the sunroof switch will also open the sunroof blind while operating the sunroof.

- With the sunroof open, press the front of the switch to partially/fully close the sunroof.

#### **NOTICE**

To prevent accidental damage, make sure any roof rack load will not interfere with the opening of the sunroof.

### 4. Sunroof blind:

**Note:** The front and rear of the switch has a 2-stage operation. Lightly press and hold to manually operate to the required position. Alternatively, press fully and release for fully (one-touch) automatic operation. Fully automatic operation can be halted at any time, by pressing the switch again.

- Press the rear of the switch to partially/fully open.
- Press the front of the switch to partially/fully close.

The sunroof blind can be opened whenever required, but it can only be closed when the sunroof is closed. If the sunroof is partially closed, then the sunroof blind will only partially close to the same position. If the sunroof blind encounters a resistance when closing, it will stop and then (dependent on its current position) it will either partially or fully open, to allow removal of the obstruction and to prevent personal injury or damage to the mechanism. Press and hold the front of the switch, within 10 seconds of the partial or full opening, to override.

### 5. Rear screen sunblind:

- Press the switch to deploy.
- Press the switch again to stow.

**Note:** If a resonance or a booming sound occurs when a rear window is open, lowering an adjacent front window by approximately 1 inch (25mm) will eliminate the condition.

## WINDOW ANTI-TRAP PROTECTION

### **⚠ WARNING**

**Before closing a window or the sunroof, make sure that no occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system, death or serious injury could occur.**

### **⚠ WARNING**

**Closing a window or roof blind onto any part of the body can result in serious injury.**

Anti-trap protection is designed to stop window movement if an obstruction or resistance is detected. Check the window and its aperture and remove any obstructions. The override procedure is, as follows:

1. Attempt to close the window. Anti-trap will prevent closure and lower the window.

# Windows

2. Within 10 seconds, attempt to raise the window again. Anti-trap will prevent closure and lower the window.
3. Attempt to close the window for a third time, this time holding the switch in the close position. The window will raise while the switch is held. Hold until closed.

**Note:** If this procedure fails to remove the blockage, or if the windows do not operate correctly, the window's operation may need to be reset. See **193, WINDOW RESET**.

## SUNROOF ANTI-TRAP MECHANISM


### ⚠ WARNING

**Before closing a window or the sunroof, make sure that no occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system, death or serious injury could occur.**

If the sunroof encounters a resistance when closing, it will stop and then (dependent on its current position) it will either partially or fully open, to allow removal of the obstruction and to prevent serious personal injury or damage to the mechanism. Press and hold the front of the switch, within 10 seconds of the partial or full opening, to override the anti-trap mechanism.

If the sunroof fails to operate correctly, it may need to be reset. See **193, SUNROOF RESET**.

## SIDE WINDOW BLINDS

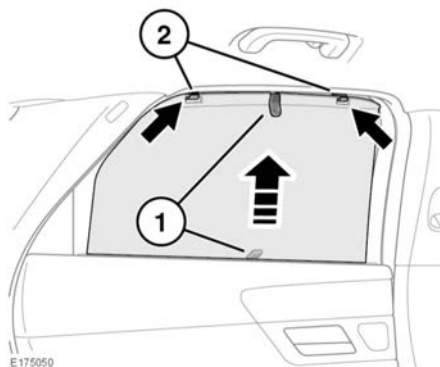

### NOTICE

*Make sure that the rear door side window blind is held, and allowed to retract slowly in to the door. Releasing the blind in the raised position may cause damage to the vehicle.*

To raise the rear door side window blind, pull upwards on the tab (1) and locate the blind on to the two hooks (2).

To lower the rear door side window blind, pull on the tab (1) to release the blind from the two hooks (2), then slowly lower the blind.

## SOLAR ATTENUATING GLASS

This type of windshield filters sunlight passing through a special laminated layer.



Electronic actuating cards, such as toll road payment cards or Radio Frequency (RF) ID tags, can be fixed at the dedicated locations on the inside of the windshield. If these cards are located at any other part of a solar attenuating windshield, the electronic scanners may not recognize them.

The fixing location is at the top of the windshield, close to the interior rear-view mirror.

**Note:** *It is recommended that the electronic actuating card should be in the size appropriate location, on the driver's side of the windshield.*

**Note:** *Transponders, mounted on the front license plate plinth, can be used as an alternative, dependent on the market and availability.*