

## ADJUSTING THE STEERING WHEEL


### **⚠WARNING**

Never adjust the steering wheel while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.

### **⚠WARNING**

Do not use steering wheel mounted security devices. Movement of the steering wheel, in Exit or Entry mode, could result in damage to the vehicle or possible injury to the occupant.

#### Electric steering column

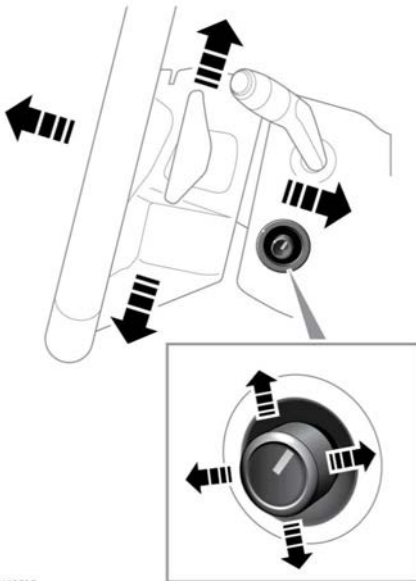

E160595

Vehicles with an electric steering column, can be adjusted to alter the tilt and reach of the steering wheel:

- **Note:** The electrically operated steering column will continue to move until the control is released, or until the steering column reaches either of its minimum or maximum positions. Move the control forwards or rearwards and the vehicle will move the steering column to adjust the reach of the steering wheel.
- Move the switch up or down and the vehicle will move the steering column to adjust the tilt of the steering wheel.

Up to 3 steering wheel positions can be stored and recalled, along with the seat and exterior mirror positions, by the driving position memory. See 21, **DRIVING POSITION MEMORY**.

## ENTRY AND EXIT MODE



E166543

With the electric steering column control in the **AUTO** position, the steering column will move to provide easier entry and exit from the vehicle.

On opening the driver's door, the system will raise the steering column to the highest position, assisting with exit from the vehicle. When the driver's door is closed and the ignition switched on, the system will return the steering column to the previous position.


# Steering wheel

**Note:** If the steering column is adjusted during entry or exit operation, automatic movement will stop.

To prevent automatic movement of the steering column, turn the control clockwise to the alternative position.

**Note:** If the steering column switch is moved away from **AUTO** when the steering column is in the exit position, the steering column will move back to its previous position when the driver's door is closed and the ignition is switched on.

## HEATED STEERING WHEEL

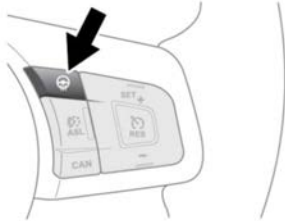

E149544

To activate the heated steering wheel, press the switch. Press again to switch off.