

## Electrical Accessories

The fitment of accessories, additional accessory supply sockets, relays and fuses must only be entrusted to a Jaguar Dealer.

### Caution:

- 1. The use of any accessories not specifically designed for this Jaguar will damage the electrical circuits and systems of the vehicle.**
- 2. Under no circumstances must the power supply be obtained directly from either battery terminal.**
- 3. The use of non-approved accessories can reduce the battery capacity and charge period to an unacceptable level, therefore Jaguar cannot accept any liability for the fitment of any such item.**

The cigar lighter socket can be used for plug-in accessories which are only temporarily connected to the vehicle (e.g. car vacuum cleaner).

## Electrical Accessory Supply Sockets

Two electrical accessory supply sockets are provided in the following areas:

1. On the passenger side, behind the glove box.
2. In the luggage compartment, clipped near the battery.

**Note:** Before connecting electrical accessories to these sockets, consult a Jaguar Dealer.

## Earth Points

If an accessory needs to be connected to an earth point, consult a Jaguar Dealer.

**Caution: Under no circumstances must holes be drilled in the bodywork to accept earth terminals.**

## 7-2 Accessories

---

Accessories .....	7-1	Capacities .....	3-8
Aerial – Cleaning .....	2-3	Care of the Exterior .....	2-1
Alternator .....	5-6	Care of the Interior .....	2-4
Anti-freeze .....	3-6	Carpets – Cleaning .....	2-4
Automatic Car Wash .....	2-1	Catalytic Converters .....	6-9
		Check/Top Up Windscreen Washer Reservoir .....	3-4
Battery .....	5-6	Cleaning .....	2-2
– Charging .....	5-7	– Carpets .....	2-4
– Connections – Clean and Grease .....	5-7	– Headlining .....	2-4
– Electrolyte – Check/Top Up .....	5-7	– Leather Upholstery .....	2-4
– Lead Connection .....	5-8	– Under Hood .....	2-2
– Lead Disconnection .....	5-8	Control Modules – Identification and Location .....	4-21
Battery/Ignition Isolator Switches .....	1-7	Convertible Top Fabric – Cleaning .....	2-2
Brake Fluid Reservoir – Check/Top Up .....	3-5	Coolant Level – Check/Top Up .....	3-3
Bulb Chart .....	5-16	Cooling System .....	3-5
Bulb Renewal .....	5-9		

# Index

---

Data .....	6-1	Fuel Requirements .....	6-8
Diagnostic System .....	1-1	Fuel Tank – Capacity .....	3-8
Dimensions .....	6-4	Fuelling and Refuelling – Catalytic Converters .....	6-9
Dipstick Location .....	3-2	Fuse Box	
		– Engine Compartment .....	4-14
Earth Points .....	7-1	– Luggage Compartment .....	4-15
Electrical Accessories .....	7-1	Fuse Box Locations .....	4-13
Electrical Accessory Supply Sockets .....	7-1	Fuse Boxes – Fascia .....	4-15
Emergency Starting Using Jump Leads .....	4-8	Fuse Ratings .....	4-16
Engine Block Heater .....	3-6	Fuses – Checking and Renewing .....	4-12
Engine Oil		Fuses and Fuse Boxes .....	4-12
– Specification .....	3-7		
– Used .....	1-7	Gasoline	
Engine Oil Level – Check/Top Up .....	3-3	– Oxygenated .....	6-8
Exterior Care .....	2-1	– Reformulated .....	6-8
		General Precautions .....	1-6
		Glass Surfaces – Cleaning .....	2-2
		Grease and Tar Removal .....	2-1

Hood Release Control . . . . .	1-8	Paint Chips . . . . .	2-3
Hydraulic Fluids . . . . .	1-7	Polishing . . . . .	2-3
Instruments . . . . .	3-1	Power Steering Reservoir – Check/Top Up . . . . .	3-5
Interior Care . . . . .	2-4	Powerwash System . . . . .	5-18
Jacking . . . . .	4-6	Precautions – General . . . . .	1-6
Jaguar Dealers . . . . .	1-1	Regular Checks . . . . .	3-1
Jaguar Diagnostic System . . . . .	1-1	– Daily . . . . .	3-1
Labels . . . . .	1-5	– Monthly . . . . .	3-1
Leather Upholstery – Cleaning . . . . .	2-4	– Weekly . . . . .	3-1
Lubricants and Fluids – Recommended . . . . .	3-7	Regular Servicing . . . . .	1-1
Maintenance and Servicing . . . . .	1-2	Relay Identification and Location . . . . .	4-22
Modules – Control . . . . .	4-21	Reservoir Locations . . . . .	3-2
		Routine Checks . . . . .	3-1

# Index

---

Safety Precautions	1-3
Safety, Warning and Caution Labels	1-5
Servicing – Regular	5-1
Snow (Winter) Tyres	6-6
Snow Chains	5-4
Spare Fuse Location	4-12
Spare Wheel and Jacking Equipment	4-1
Spare Wheel Stowage	4-2
Spark Plug Grades	6-1
Spikes Spiders	5-4
Steam Cleaning – Under Hood Area	2-2
Temporary-use Spare Wheel	4-1
Topping Up – Oil and Fluid Levels	3-3
Towing – Suspended Recovery	4-10
Towing Eyes	4-11
Transporting	4-10
Tyres	5-1
– Damage	5-2
– Data	6-5
– Pressures (Recommended)	6-7
– Renewal	5-2
– Repair	5-1
– Size and Type	5-2
– Use after Vehicle Storage	5-2
– Wear	5-3
– Winter (Snow)	6-6
Under Hood Cleaning	2-2
Valet Kit	2-1
Vehicle Data	6-1
Vehicle Recovery	4-10
Warning symbols	1-3
Washing	2-1
Weights	6-2
Wheel Changing and Jacking	4-2
Wheel/Tyre Data	6-5
Wheels	
– Care of	5-4
– Chromium-plated	2-3
– Cleaning	2-3
– Locking Nuts	4-4
– Temporary-use Spare	4-1
Windscreen Washer/Powerwash – Check/Top Up	3-4
Windscreen Washers	5-18
Windscreen Wiper Blades – Inspect, Clean and Renew	5-17