

## Care of the audio system

Do not use petrol, solvents or abrasive cleaners on the radio. Wipe the surface of the radio with a lint-free cloth to remove dust. Slightly moisten the cloth with clean water to remove any finger marks from the outside surface of the radio.

### Cassettes

Always use good quality cassettes. Low cost tapes can cause jamming, the sound quality will be inferior, and they can create a fast build-up of deposits on the play-back head.

Before playing, check the cassettes to ensure that the tape is not loose on the spools. If necessary, take up the slack by gently turning the spools with the end of a pencil. A jammed or sticking tape will cause the auto-reverse mechanism to operate continuously.

It is advisable not to use a tape longer than 45 minutes playing time each side (C90). Cassettes should be stored in their library cases away from direct sunlight. Do not store cassettes in door pockets where they could be affected by the magnets in loud-speakers which might impair the sound quality.

Never insert a cassette that has a torn or loose label, it may cause the mechanism to jam.

After approximately 15 hours playing time, the display on the radio will show **CLEAN TAPE**. Clean the tape mechanism itself using a mechanical type cleaner with a wetting agent in an approved kit available from your Jaguar Dealer. Do not use abrasive type cleaners as they can cause excessive wear on the play-back head.

### Compact Discs (CDs)

When handling CDs, do not touch the playing surface. When they are not being used they should always be stored in their cases away from direct sunlight, heat and dust. Scratches, finger-marks or dust on the surface of a disc can cause the optical pick-up to skip tracks. If the surface is dirty, use an appropriate CD cleaner.

Do not attempt to play damaged, warped, cracked or oversized discs. They could seriously damage the play-back mechanism.

### Aerial

The aerial care procedure should be carried out when cleaning the exterior of the vehicle, to ensure smooth and reliable operation of the aerial.

When cleaning the aerial, always wipe it in an upwards direction. Occasionally use an aerial maintenance wipe cloth to lubricate the aerial.

In freezing conditions check that no ice has formed over the top of the aerial, this could prevent it from being raised, causing damage to the lift motor.

A special aerial cleaner is available from your Jaguar Dealer.



Aerial operation .....	1-4	CD operation .....	2-11
Care of the audio system .....	3-1	– Band switches AM and FM .....	2-11
– Aerial .....	3-1	– CD button .....	2-11
– Cassettes .....	3-1	– CD selection .....	2-11
– Compact discs (CDs) .....	3-1	– Forward, reverse control .....	2-12
Cassette tape operation .....	2-7	– MIX and disc MIX .....	2-11
– Band switches AM/FM .....	2-7	– Phone mode .....	2-12
– CD Button .....	2-9	– Priority programme type .....	2-12
– Dolby B .....	2-7	– Tape button .....	2-12
– Eject button and tape-in indicator .....	2-7	– Traffic announcement – local radio station .....	2-12
– Forward, rewind control .....	2-8	CD player fault diagnosis .....	2-13
– Phone mode .....	2-9	Compact disc (CD) player	
– Priority programme type .....	2-8	– CD check sequence .....	2-10
– Programme change button .....	2-8	FM and AM reception .....	1-4
– Tape button .....	2-7	Radio cassette .....	1-2
– Traffic announcements – local radio stations .....	2-9	Radio data system and traffic announcements .....	2-2
CD changer .....	2-10	– Priority programme type .....	2-4
– Ejecting the magazine .....	2-10	– Programme type – PT .....	2-4
– Inserting the magazine .....	2-10	– RDS and TA operation .....	2-3
		– RDS trouble-shooting guide .....	2-5
		– TA and priority PTY interrupt skip .....	2-4
		– TA preset minimum volume .....	2-3
		– Traffic announcements .....	2-3

# Index

---

## Radio operation

- A–MEM with RDS selected ..... 2-1
  - Auto memory (A–MEM) ..... 2-1
  - Band switch AM/FM ..... 2-1
  - Phone mode ..... 2-4
- Radio set up modes ..... 2-6
- To enter the set up mode ..... 2-6

Security code number ..... 1-1

## Sound quality

- Mode button ..... 1-5
  - Optimising sound ..... 1-5
- Sound system display ..... 1-3
- Steering wheel audio system controls ..... 1-3

## Tuning control

- Preset buttons ..... 1-6
- Seek and manual tuning ..... 1-6

## Volume control

- ON/OFF ..... 1-4

**JJM 10 03 14/30**